






45-0563

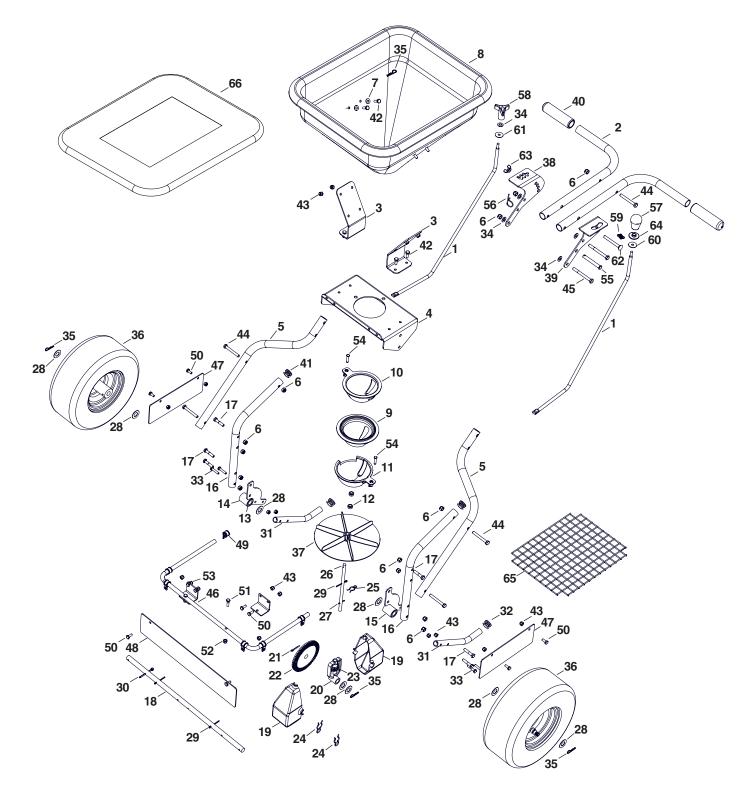



45-0563


REF	QTY	PART NO	DESCRIPTION	REF	QTY	PART NO	DESCRIPTION
1	2	28793	ROD, FLOW CONTROL	36	2	49907	WHEEL, POLY 5/8"ID 13/5.0-6
2	2	28791-001	TUBE, HANDLE	37	1	28794	SPREADER IMPELLER
3	2	2-20	BRACE, HOPPER	38	1	28790	BRACKET, PIVOT
4	1	28814	SUPPORT, HOPPER	39	1	2-226	BRACKET, PIVOT (OPEN/
5	2	28788-001	TUBE, HANDLE EXTENSION				CLOSE)
6	13	47810	NUT, HEX .312-18 NYLOC	40	2	46446	GRIP, HANDLE 1"
7	4	736-0142	WASHER, .281 X .625 X .065	41	2	49449	PLUG, 1"OD TUBE
8	1	28807	HOPPER, SMALL	42	8	43012	BOLT, HEX 1/4-20 X 3/4 GR5
9	1	2-112	GATE TRANSITION	43	12	47189	NUT, HEX 1/4-20 NYLOC
10	1	28808	DISPENSER GATE	44	5	44292	BOLT, HEX 5/16-18 X 2-1/2
11	1	2-102	OUTER GATE	45		40700	GR5
12	2	23625	SPACER, .380ID X .6200D	45	2	46782	BOLT, HEX 5/16-18 X 3 GR5
			X .27	KIT	1	6-204	KIT, SPREADER DEFLECTOR (kit includes
13	2	28785	BEARING				items 46 through 53)
14	1	69887	SLEEVE WELDMENT (RH)	46	1	2-228	TUBE, DEFLECTOR FRAME
15	1	69890	SLEEVE WELDMENT (LH)	47	2	2-229	DEFLECTOR, SIDE
16	2	28801-001	TUBE, LOWER	48	1	2-230	DEFLECTOR, FRONT
17	6	43085	BOLT, HEX 5/16-18 X 1-1/2	49	6	4-11	CLAMP, RUBBER SLEEVE
10		0.000	G5	50	10	43866	BOLT, HEX 1/4-20 X 5/8 GR5
18	1	2-263	SHAFT, AXLE SPREADER	51	2	43661	BOLT, HEX .25-20 X 1 GR5
19	2	47212	HOUSING, LARGE GEAR	52	12	47189	NUT, HEX 1/4-20 NYLOC
20 21	1 1	47204 43010	YOKE, LARGE PIN, COTTER 1/8 X 1-1/4	53	2	2-221	BRACKET, SS DEFLECTOR
21	1	43010	GEAR, LARGE				MOUNT
22	1	47209 47205	GEAR, SMALL	54	2	48365	PIN, CLEVIS 1/4 X 1.11
23 24	2	47205 49897	CLIP, HAIRPIN 7/8	55	1	43037	PIN, CLEVIS 3/8 X 2-3/4
24 25	2	49898	CLIP, HAIRPIN 7/8	56	1	43055	PIN, HAIR 3/32 X 1.8
25	1	49898 2-264	SHAFT, SPREADER	57	1	42651	KNOB, 1/4-20
20	1	46055	PIN, SPRING 1/8 X 1	58	1	43849	KNOB, PLASTIC 1/4"-20
28	8		WASHER, .656 X 1.25 X .059	59	1	40526	SPRING, SS EXTENSION
20	3	43093	PIN, COTTER 1/8 X 1-1/2	60	1	45346	WASHER, NYLON .28 X 1.0
30	1	46855	PIN, COTTER 3/16 X 2				X .06
31	2	28789	TUBE, KICKSTAND	61	1	42977	WASHER, .28 X 1.0 X .06
32	2	2-381	PLUG	62	1	46594	BOLT, CARR 5/16-18 X 2-3/4
33	4	1509-90	BOLT, HEX 1/4-20 X 1-1/4	63	1	4-18	WINGNUT, 5/16 - 18
	-7	1000-00	GR5	64	1	44685	SPACER, SHOULDER
34	5	48015	WASHER, NYLON	65	1	28812	GRATE
35	4	47134	PIN, HAIR COTTER	66	1	2-1	HOPPER COVER
			.08 X 1.58				

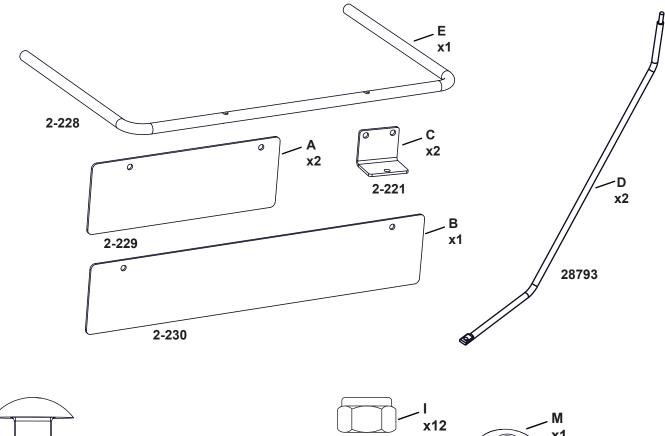


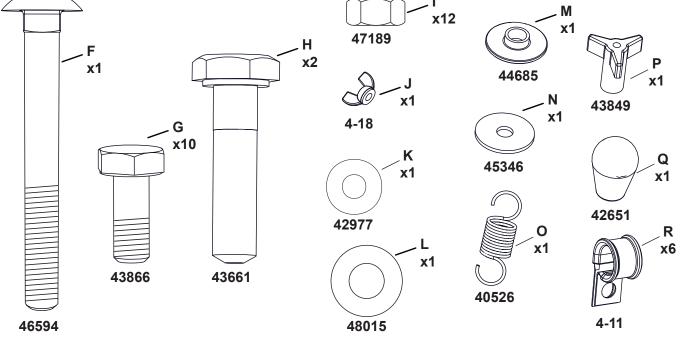


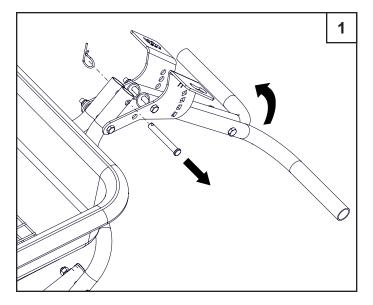


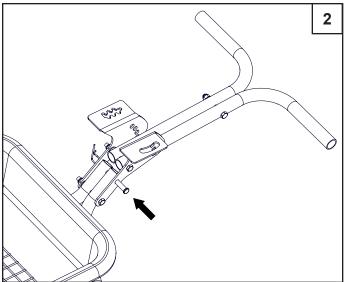

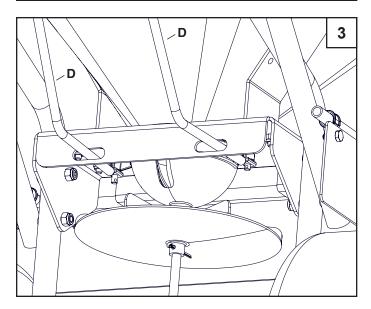

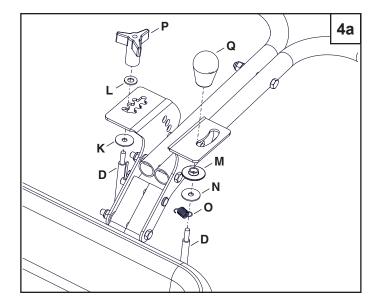

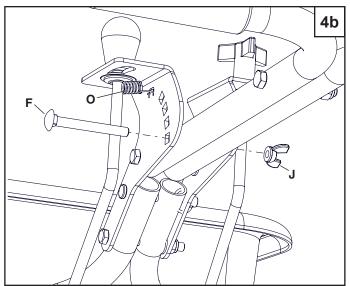

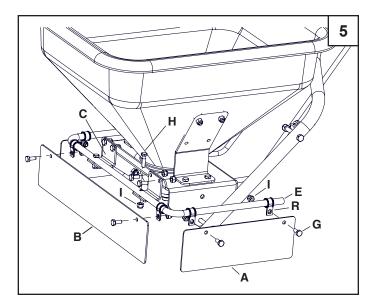

APPLICATION TIPS

Recommended speed: 3 MPH (100 feet in 23 seconds)

(Reduce flow setting for slower speed, and increase for higher speed).

in both spread width and coverage.

to prevent excess fertilizer being released. Spreaders operate best with solid materials.

Distribution of powders may vary from this table

Always move flow control arm to the "OFF" position while filling spreader and when STOPPING or TURNING,

1 Set flow gauge on #0 position and push control arm to the "OFF" position.

HOW TO USE YOUR SPREADER

- 2 Move tractor and/or spreader onto flat surface.
- 3 Before filling spreader, refer to chart guidelines:

R sh	TYPE MATERIAL	SETTING AT 3 MPH	SPREAD WIDTH IN FEET		
it	FERTILIZER Powder Granular Pelleted Organic	3 - 5 3 - 5 3 - 5 6 - 8	3 - 4 8 - 10 10 - 12 6 - 8		
	GRASS SEED Fine Coarse	3 - 4 4 - 5	6 - 7 8 - 9		
	ROCK SALT ICE MELT	5 - 6 4 - 5	14-16 12-14		

SAFETY INFORMATION

- 1. Read the information on the chemical package for instructions and cautions on handling and applying.
- 2. Wear eye and hand protection when handling and when applying lawn or garden chemicals.
- 3. Never allow children to operate the spreader.



WARNING: Over-inflated tires can explode, causing serious injury. To avoid injury, NEVER inflate tires beyond the maximum pressure printed on the sidewall of the tire. ALWAYS use a hand pump to safely inflate tires.

MAINTENANCE

- 1. Apply a light coating of grease to the gears as needed.
- 2. Before each use make a thorough visual check of the spreader for any bolts and nuts which may have loosened. Retighten any loose bolts and nuts.
- 5. Make sure the tires are adequately inflated. Do not inflate beyond the maximum pressure printed on the tire.

AGRI-FAB LIMITED WARRANTY ON TERRA KING COMMERCIAL-GRADE SPREADERS

<u>WHO IS COVERED</u>: This Warranty covers the original purchaser of a TERRA KING-branded commercialgrade spreader manufactured by Agri-Fab, Inc. It is not transferable to subsequent purchasers or end-users, with one exception: if the product is purchased to be sold at retail, this Warranty will automatically be transferred to the original retail purchaser.

<u>HOW LONG DOES COVERAGE LAST</u>: This Warranty remains in force for 5 years from the date of purchase with respect to the spreader hopper and metal gears, and 1 year from the date of purchase for all other components; provided, however, that if the product is used for rental purposes, this Warranty remains in force for only 90 days from the date of purchase with respect to all components. This Warranty will not be extended for additional time if Agri-Fab replaces or repairs the product.

<u>WHAT IS COVERED</u>: Any defect in material or workmanship of your TERRA-KING Commercial-Grade Spreader product or component.

<u>WHAT IS NOT COVERED</u>: Damage caused by transportation, storage, misuse, excessive use, accident, neglect, modification, normal wear and tear, natural oxidization, or the corrosive effects of fertilizers, ice melt products, powdered metals or other materials placed in the spreader. This Warranty also does not cover any parts which may need to be replaced due to normal use of the product such as, but not limited to, tires.

<u>WHAT AGRI-FAB WILL DO</u>: Repair or replace your TERRA-KING Commercial-Grade Spreader product or component.

<u>HOW TO GET SERVICE</u>: Deliver the TERRA KING Commercial-Grade Spreader or component to Agri-Fab's local authorized service dealer or distributor. If you do not know the dealer or distributor in your area, please contact the Customer Service Department of Agri-Fab, Inc. by phone, email or letter (see contact info. below). The return of a product or part to Agri-Fab will not be accepted unless prior written permission has been extended by Agri-Fab.

FOR CONSUMER TRANSACTIONS COVERED BY THE MAGNUSON-MOSS WARRANTY ACT, THE DURA-TION OF ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THE ABOVE EXPRESS WARRANTY. FOR ALL OTHER TRANSAC-TIONS, AGRI-FAB IMMEDIATELY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS EXPRESS WARRANTY SUPERSEDES ALL PRIOR OR CONTEMPORANEOUS ORAL OR WRITTEN REPRESENTATIONS CONCERNING THE PRODUCTS. NO AGRI-FAB EMPLOYEE, DEALER OR ANY OTHER PERSON IS AUTHORIZED TO MODIFY THIS WARRAN-TY OR MAKE ANY OTHER WARRANTY IN ADDITION TO THE WARRANTIES SET FORTH IN THIS DOCU-MENT. IN NO EVENT SHALL AGRI-FAB BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR OF INCIDENTAL OR CONSE-QUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Contact Information for Agri-Fab, Inc.

Phone: 1-800-448-9282 Email: ContactUs-AF@agri-fab.com Address: 809 S. Hamilton St., Sullivan, Illinois 61951

Website: www.Agri-fab.com Parts: www.Speedepart.com

SpeedEPart the fastest way to purchase parts www.speedepart.com

REPAIR PARTS

Agri-Fab, Inc. 809 South Hamilton Sullivan, IL. 61951 800-448-9282 www.agri-fab.com

This document (or manual) is protected under the U.S. Copyright Laws and the copyright laws of foreign countries, pursuant to the Universal Copyright Convention and the Berne convention. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, or by any information storage or retrieval system, without the express written permission of Agri-Fab, Inc. Unauthorized uses and/or reproductions of this manual will subject such unauthorized user to civil and criminal penalties as provided by the United States Copyright Laws.