

12 cu. ft. Leaf Bag with Chute Kit (LTLB95001)


Includes one 10 bu. 12 cu. ft. Leaf Collection Bag and Chute Kit Assembly.

Product Compatibility

Compatible with 42 in. Deck Husqvarna models YTA18542, YTH18542, YTH22V42, YTA19K42, YTH23V42.

42 in. Deck Poulan Pro models PP155H42, PP175G42, PP17G42, PP19A42, PP19H42.

42 in. Deck Dixon model D20KH42.

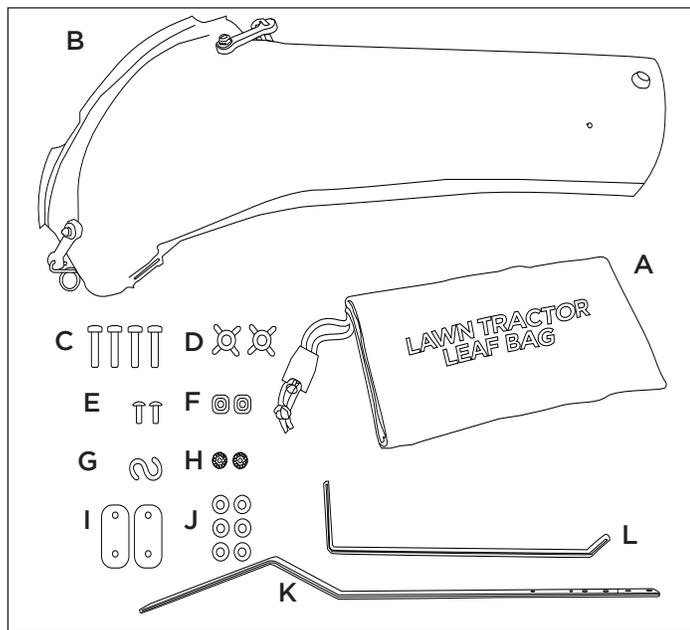


Kit Includes


	Description	Qty.
A	12 cu. ft. Leaf Bag	1
B	Deck Chute	1
C	3/8 in. Hex Bolt	4
D	Four Lobe Knob	2
E	1/4 Truss Head Bolt	2
F	1/4 Flange Nut	2
G	S-hook	1
H	3/8 in. Flange Nut	2
I	Extension Tab	2
J	3/8 in. Washer	6
K	Bag Bracket	1
L	Guide Bracket	1

Installation Instructions

1. Slide the Deck Chute (A) onto the tab (B) located on the front of the mower deck.

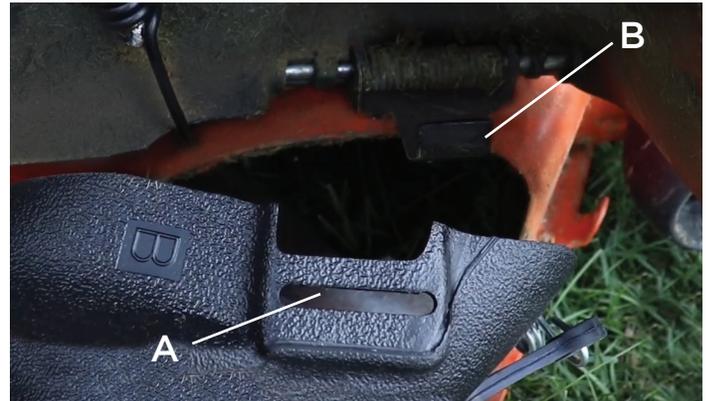


2. Attach the bungee cord (C) on the front of the Deck Chute to the hole in the metal tab (D) located on the front of the mower deck.

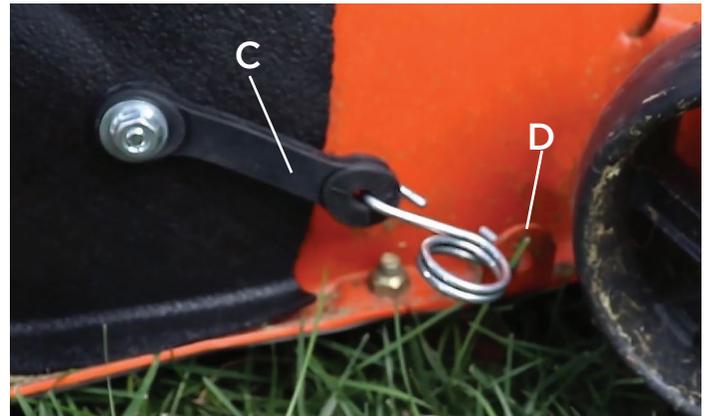

3. Attach the bungee cord (E) on the rear of the Deck Chute to the hole in the metal tab (F) located near the rear of the mower deck.




4. Mount the Guide Bracket (G) to the bag bracket (H). Insert the two 1/4 Truss Head Bolts (I) into the end of the Guide Bracket and then through the two predrilled holes located

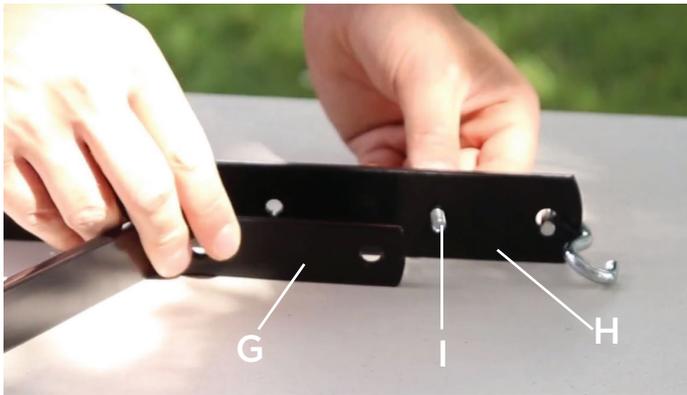

on the end of the Bag Bracket. Secure bracket in place using the two 1/4 in. Flange Nuts (J).



5. Remove the two pre-installed plastic cargo mount inserts located on the corners of the tractor's fender.
6. Take a 3/8 in. Washer (K) and place it over a 3/8 in. Hex Bolt (L) then insert bolt through the hole from underneath the fender.

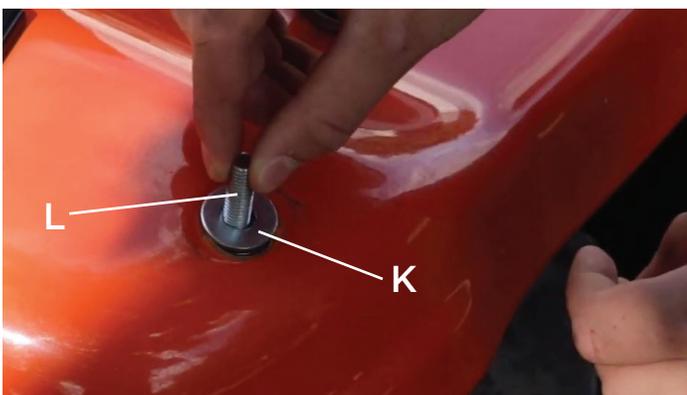


7. Place a 3/8 in. Washer over the bolt followed by the Extension Tab (M) with the second hole facing straight back, then screw on the 3/8 in. Flange Nut (N). Repeat on other side.



8. Align the holes on the Bag Bracket (O) with the holes on the Extension Tab (P).



9. Insert a 3/8 in. Hex Bolt (Q) through the bottom of the second hole in the Extension Tab (R), then install the Bag Bracket (S), a 3/8 in. Washer (T), and screw on four-lobe knob (U) on top. Repeat on other side.

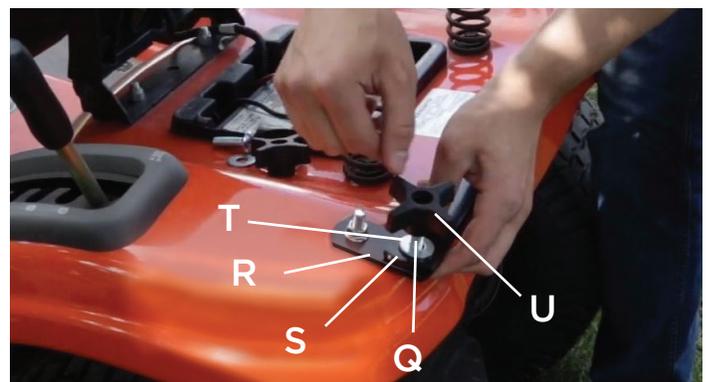

10. Tighten all nuts/hardware installed in steps 6 through 8.

- Slide leaf bag opening onto the Deck Chute. Cinch the bag by using the leaf bag's plastic cord lock. To tighten, pull the center loop of the plastic cord lock out, pull the drawstring (V) until tight, then push the center loop back inside the cord lock to hold the drawstring in place.



- Hang Leaf Bag on S-hook (W) using Grommet. To prevent interference and tangling, hook the drawstring (X) onto the S-hook.



Practice Safe Maintenance

- Disengage mower blades and set parking brake before installing, adjusting, or removing leaf bag.
- Always follow safety recommendations from your mowers manufacturer.
- Avoid reversing. Reversing can result in damage to bag and tractor/mower. Bag may get lodged in tires or contact rear exhaust.
- If the bag is too heavy or too large to handle in tight spaces, tie off a small portion at the end of the bag to resize.

Lawn Tractor Leaf Bag by Superior Tech
 877-530-9084
 sales@Lawntractorleafbag.com
 Form # LTLB-02-08 /19

- If your bag accidentally rips or gets a hole in it, sew it, tape it, or use an iron-on patch to close it as soon as possible.
- To clean your bag, you can hose it off and then hang it up to dry.

Removal and Emptying

- Drive your Leaf Bag to preferred emptying location.
- Remove Leaf Bag from S-hook.
- Unhook the S-hook from the Lawn Tractor Leaf Bag's metal grommet.
- Remove the Leaf Bag from the Deck Chute.
- Empty the Leaf Bag by grabbing the two back corners and shaking out the leaves.

Warranty

Lawn Tractor Leaf Bag products are guaranteed to be free from defects in material and/or workmanship and to perform as advertised when properly assembled, installed, used, and maintained in accordance with written instructions. Failure to adhere to this will void the warranty. Lawn Tractor Leaf Bag will not be responsible for labor, loss, or consequential damage of any kind or character caused by defective parts, or for charges incurred in the replacement or repair of defective parts. Lawn Tractor Leaf Bag reserves the right to request photos or return of damaged/defective parts. To submit a claim, please have your original purchase date and a copy of your receipt.

Warranty Period

Lawn Tractor Leaf Bag products are warranted for a period of 1 (one) year after the purchase date. This product is warranted by Lawn Tractor Leaf Bag to the original purchaser/customer against defects in material and workmanship under normal operating conditions.