

# 12 cu. ft. Leaf Bag with Chute Kit (LTLB95004)


Includes one 10 bu. 12 cu. ft. Leaf Collection Bag and Chute Kit Assembly.

## Product Compatibility

Compatible with 42 in. Edge Decks John Deere Models E100, E110, E120, E130, D100, D110, D120, D130, LA100, LA105, LA110, LA115, LA120, LA125, LA135, S240.

48 in. Edge Decks John Deere Models E140, E150, E160, E170, D140, D150, D155, D160, LA130, LA145, LA140, LA165.

**WARNING:** This bag is not intended to completely replace the bags/baskets on your collection system. Leaf bags are designed for leaf collection only.

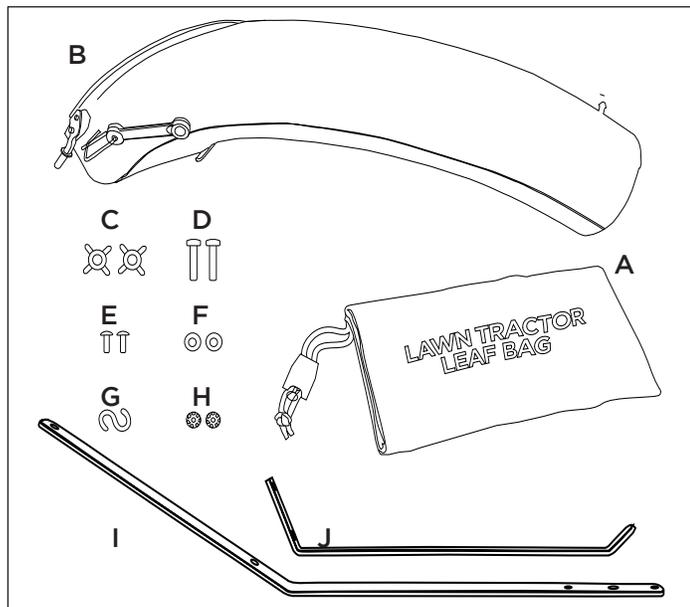

## Kit Includes


	Description	Qty.
A	12 cu. ft. Leaf Bag	1
B	Deck Chute	1
C	Four-Lobe Knob	2
D	3/8 in. Hex Bolt	2
E	1/4 Truss Head Screw	2
F	3/8 in. Washer	2
G	S-hook	1
H	1/4 in. Flange Nut	2
I	Bag Bracket	1
J	Guide Bracket	1

## Installation Instructions

1. Fold back the safety deflector (A) where material exits the deck.




2. Slide the metal rod (B) on the front of the Deck Chute (C) through the hole in the front gauge wheel and attach the bungee cord (D) on the front of the Deck Chute support on the right side of the mower deck.

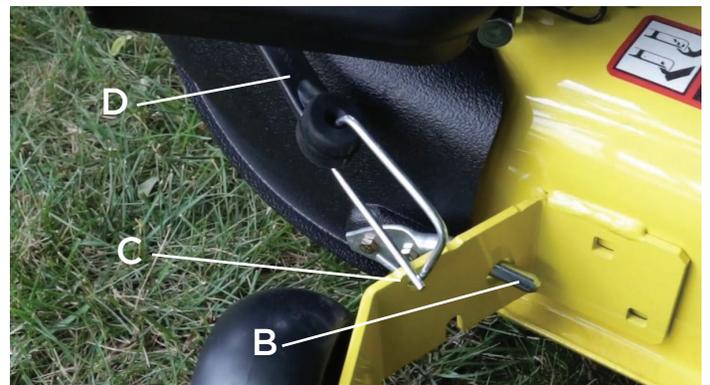

3. Attach the bungee cord (E) on the rear of the deck chute through the hole in the rear gauge wheel support (F) on the right side of the mower deck.




4. Mount the Guide Bracket (G) to the Bag Bracket (H). Insert the two 1/4 Truss Head Bolts (I) into the end of the Bag bracket, then through the two holes located on the end of the Guide Bracket with the opposite end pointing towards the S-hook.

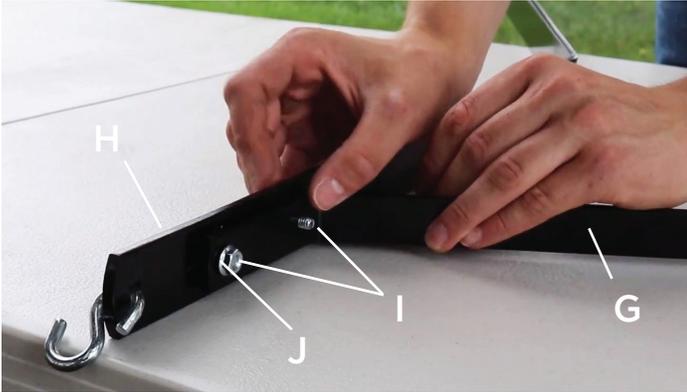

5. Secure the Bag Bracket in place using the two 1/4 in. Flange Nuts (J). The angled section at the end of the attached Guide Bracket should be facing away from the tractor.
6. On the underside of the tractor's rear fender, install one 3/8 in. Hex Bolt (K) through the small hole in one of the black plastic cargo mount inserts (L).



7. Install the Bag Bracket (M) over the 3/8 Hex Bolt, place a 3/8 in. Washer (N) on the bolt, then screw on a Four-Lobe Knob (O).

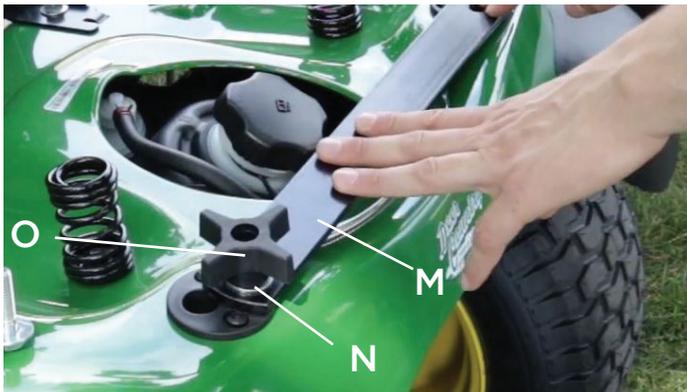

8. Slide the opening of the Lawn Tractor Leaf Bag onto the end of the Deck Chute.
9. Cinch the bag to the plastic deck chute by using the plastic cord lock on the bag's drawstring. To tighten, pull the center loop of the plastic cord lock out, pull the drawstring (P) until tight, then push the center loop back inside the cord lock to hold the drawstring in place.



10. Attach the S-hook (Q) through the metal grommet on the Leaf Bag.



11. To prevent interference and tangling, hook the drawstring (R) onto the S-hook.



## Practice Safe Maintenance

1. Disengage mower blades and set parking brake before installing, adjusting, or removing leaf bag.
2. Always follow safety recommendations from your mowers manufacturer.
3. Avoid reversing. Reversing can result in damage to bag and tractor/mower. Bag may get lodged in tires or contact rear exhaust.
4. If the bag is too heavy or too large to handle in tight spaces, tie off a small portion at the end of the bag to resize.
5. If your bag accidentally rips or gets a hole in it, sew it, tape it, or use an iron-on patch to close it as soon as possible.
6. To clean your bag, you can hose it off and then hang it up to dry.

## Removal and Emptying

1. Drive your Leaf Bag to preferred emptying location.
2. Remove Leaf Bag from S-hook.
3. Unhook the S-hook from the Lawn Tractor Leaf Bag's metal grommet.
4. Remove the Leaf Bag from the plastic deck chute.
5. Empty the Leaf Bag by grabbing the two back corners and shaking out the leaves.

## Warranty

Lawn Tractor Leaf Bag products are guaranteed to be free from defects in material and/or workmanship and to perform as advertised when properly assembled, installed, used, and maintained in accordance with written instructions. Failure to adhere to this will void the warranty. Lawn Tractor Leaf Bag will not be responsible for labor, loss, or consequential damage of any kind or character caused by defective parts, or for charges incurred in the replacement or repair of defective parts. Lawn Tractor Leaf Bag reserves the right to request photos or return of damaged/defective parts. To submit a claim, please have your original purchase date and a copy of your receipt.

## Warranty Period

Lawn Tractor Leaf Bag products are warranted for a period of 1 (one) year after the purchase date. This product is warranted by Lawn Tractor Leaf Bag to the original purchaser/customer against defects in material and workmanship under normal operating conditions.