



JOHN DEERE

OPERATORS MANUAL
15 Gallon Tow Behind Sprayer

LP194781
Supplier 3-453
07/10/2026
English

Introduction

Using Your Operator’s Manual

Read this entire operator’s manual, especially the safety information, before operating.

This manual is an important part of your machine. Keep all manuals in a convenient location so they can be accessed easily.

Use the safety and operating information in the attachment operator’s manual, along with the machine operator’s manual, to operate and service the attachment safely and correctly.

If your attachment manual has a section called Preparing the Machine, it means that you will have to do something to your tractor or vehicle before you can install the attachment. The Assembly and Installation sections of this manual provide information to assemble and install the attachment to your tractor or vehicle. Use the Service section to make any needed adjustments and routine service to your attachment.

If you have any questions or concerns with the assembly, installation, or operation of this attachment, see your local John Deere dealer.

Table of Contents

Introduction	2
Product Compatibility	2
Safety Labels	3
Safety	4
Assembly - Parts in Kit	7
Installation	10
Preparing Vehicle.....	12
Operation.....	13
Removal and Storage	16
Service	17
Troubleshooting	18
Specifications	19
Parts Diagram.....	20
Good Quality Service.....	22
Warranty	23

Product Compatibility

This Sprayer is designed for use with John Deere riding lawn and garden products and John Deere utility vehicles.

Contact your John Deere dealer for specific machine compatibility information.


Original instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication.

The right is reserved to make changes at any time without notice.

NOTE: Retain these installation instructions with the machine operators manual.

Safety Labels

Safety Label Location

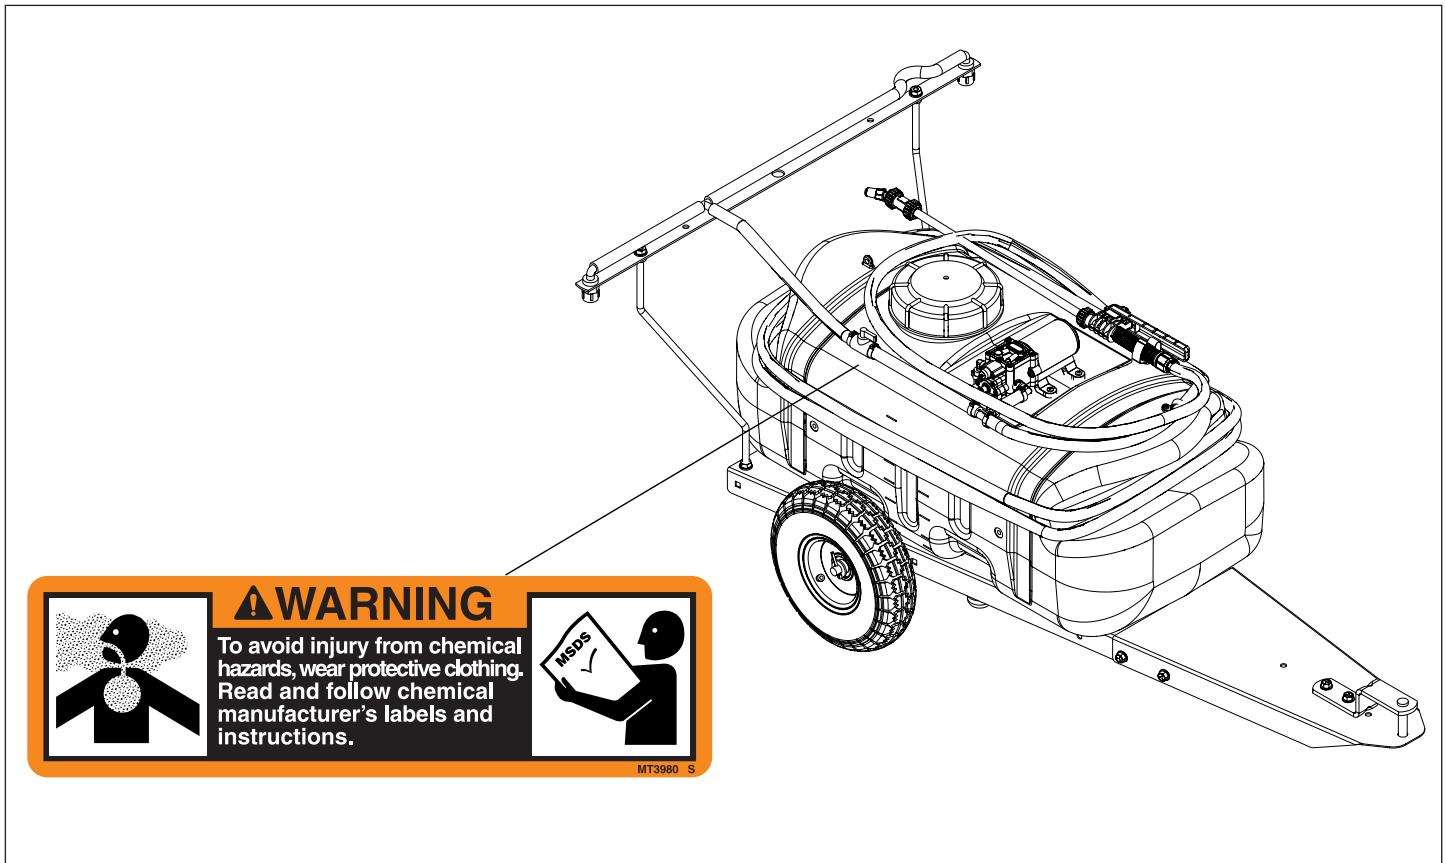

Understanding The Machine Safety Labels



The machine safety labels shown in this section are placed in important areas on your machine to draw attention to potential safety hazards.

On your machine safety labels, the words **DANGER**, **WARNING**, and **CAUTION** are used with this safety-alert symbol. **DANGER** identifies the most serious hazards.

The operator's manual also explains any potential safety hazards whenever necessary in special messages that are identified with the word, **CAUTION**, and the safety-alert symbol.

Replace missing or damaged safety labels. Use this operator's manual for correct safety label placement.

There can be more safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Warning

- To avoid injury from chemical hazards, wear protective clothing. Read and follow chemical manufacturer's labels and instructions.



Safety

Read Safety in Machine Operator's Manual

Read the general safety operating precautions in your machine operator's manual for additional safety information.

Operate Safely

- Read the machine and attachment operator's manual carefully. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the machine and disengage the controls quickly.
- Do not let children or an untrained person operate machine.
- Make any necessary adjustments before you operate. Never attempt to make any adjustments while the engine is running, unless if recommended in adjustment procedure.
- Take all possible precautions when leaving the machine unattended. Shut off the engine before making any repairs, adjustments, or inspections. Lower the attachment, lock the parking brake, stop the engine, and remove the key.
- Look behind machine before you back up. Back up carefully.
- Do not let anyone, especially children, ride on machine or attachment. Riders are subject to injury such as being struck by foreign objects and being thrown off. Riders may also obstruct the operator's view, resulting in the machine being operated in an unsafe manner.
- Use only attachments and accessories approved by the manufacturer of this product.
- If the machine vibrates abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning of trouble.
- Always refer to the Storage section of the operator's manual for important details if storing this product for a long period of time.
- Keep people and pets out of the work area. Stop machine if anyone enters the area.
- If you hit an object, stop the machine and inspect it. Make repairs before you operate. Keep machine properly maintained and in good working order. Keep all shields and guards in place.
- Always inspect the sprayer completely before and after each use. Before pressurizing the system, check to be sure all fittings and hoses are tightly installed. Be sure guards and shields are in good condition and fastened in place. Make any necessary adjustments before you operate.
- Never use the sprayer during windy conditions.

- Always release pressure in the system before filling, cleaning or servicing the sprayer.
- Do not put nozzle tip or other sprayer parts to your lips to blow out dirt.
- Use compressed air.
- If the sprayer is mounted to the bed of a utility vehicle, never raise the bed with the sprayer installed. Empty the sprayer and remove it from the bed if you need to raise the bed for any reason.

Parking Safely

1. Stop vehicle on a level surface, not on a slope.
2. Lock park brake.
3. Stop engine.
4. Remove key.
5. Before you leave the operator's seat, wait for engine and all moving parts to stop.
6. Disconnect the negative battery cable or remove the spark plug wire (for gasoline engines) before servicing the machine.

Mix and Handle Chemicals Safely

- It is best to wear full cover clothing and always wear protective goggles and rubber gloves to protect yourself while handling chemicals.
- Follow instructions on chemical container labels.
- Open all chemical containers carefully, using proper tools.
- Open, pour, weigh and mix chemicals in a well-ventilated area.
- Reserve all equipment used for the application of chemicals exclusively for that purpose.
- Prohibit all smoking, drinking and eating food in chemical-handling area.
- It is a good practice to take a soapy shower immediately after the using the sprayer to apply chemicals.
- Wash all clothing worn when using chemicals separately in the laundry after spraying is completed.

Safety

Read Chemical Container Label

- Chemicals can be dangerous. Improper selection or use can injure persons, animals, plants, soils or other property. Select the right chemical for the job and handle and apply with care.
- Read the instructions, precautions, and warnings on the container label before opening. Use the product strictly according to label directions for specific applications, in the amounts specified, at the times specified and only when needed.
- Keep the container closed tightly except when preparing the mix.
- Do not remove labels from chemical containers. Store all chemicals in their original containers.
- Do not mix chemicals unless stated on the container label.
- Store chemicals when not in use according to the container label.

Handle Chemical Products Safely

- Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include pesticides, herbicides and fungicides.
- A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.
- The MSDS should be obtained from the chemical dealer at the time of the chemical purchase.
- Check the MSDS before beginning any job using a hazardous chemical. Know exactly what the risks are and how to do the job safely. Always wear recommended personal protection equipment.

Towing Loads Safely

- Stopping distance increases with speed and weight of towed load. Travel slowly and allow extra time and distance to stop.
- Total towed weight must not exceed limits specified in towing vehicle operator's manual.
- Excessive towed load can cause loss of traction and loss of control on slopes. Reduce towed weight when operating on slopes.
- Never allow children or others in or on towed equipment.
- Use only approved hitches. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the approved hitch point.

- Follow the manufacturer's recommendations for weight limits for towed equipment and towing on slopes. Use counterweights or wheel weights as described in the machine operator's manual.
- Do not turn sharply. Use additional caution when turning or operating under adverse surface conditions. Use care when reversing.
- Do not shift to neutral and coast downhill.

Keep Riders Off Towed Attachment

- Keep riders off of a towed attachment.
- Riders on a towed attachment are subject to injury, such as being struck by objects and being thrown off the attachment during sudden starts, stops and turns.
- Riders obstruct the operator's view, resulting in the attachment being used in an unsafe manner.
- Keep riders off of hitch bracket.

Avoid Injury From Drawbar

Before you disconnect an attachment from machine hitch plate:

- Unload attachment.
- Stop attachment on level ground.
- Stop machine engine.
- Lock machine park brake.
- Block attachment wheels.
- Make sure hands, feet or other body parts are not under drawbar.

Practice Safe Maintenance

- Only qualified, trained adults should service this machine.
- Understand service procedure before doing work. Keep area clean and dry.
- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
- Never lubricate, service or adjust the machine or attachment while it is moving. Keep safety devices in place and in working condition. Keep hardware tight.
- Keep hands, feet, clothing, jewelry, and long hair away from any moving parts, to prevent them from getting caught.
- Lower any attachment completely to the ground or to an existing attachment mechanical stop before servicing the attachment. Disengage all power and stop the engine. Lock park brake and remove the key. Let machine cool.

Safety

- Disconnect battery or remove spark plug wire (for gasoline engines) before making any repairs.
- Before servicing machine or attachment, carefully release pressure from any components with stored energy, such as hydraulic components and springs.
- Release hydraulic pressure by lowering attachment or cutting units to the ground or to a mechanical stop and move hydraulic control levers.
- Securely support any machine or attachment elements that must be raised for service work. Use jack stands or lock service latches to support components when needed.
- Never run engine unless park brake is locked.
- Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Replace all worn or damaged safety and instruction decals.
- Check all hardware at frequent intervals to be sure the equipment is in safe working condition.
- Do not modify machine or safety devices. Unauthorized modifications to the machine or attachment may impair its function and safety.
- Death or serious injury will result from contact with overhead power lines. Keep clear of electrically charged power lines. Check the area before operating the spreader.

Wear Appropriate Clothing



Always wear eye protection when operating the machine.

Wear close fitting clothing and safety equipment appropriate for the job.

- While operating this machine, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals.
- Wear a suitable protective device such as earplugs. Loud noise can cause impairment or loss of hearing.

Avoid High Pressure Fluids

- Hydraulic hoses and lines can fail due to physical damage, kinks, age, and exposure. Check hoses and lines regularly. Replace damaged hoses and lines.
- Hydraulic fluid connections can loosen due to physical damage and vibration. Check connections regularly. Tighten loose connections.
- Escaping fluid under pressure can penetrate the skin causing serious injury. Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

- Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A. Information may be obtained in the United States and Canada only by calling 1-800-822-8262.

Dispose of Chemicals Properly

- Proper disposal of excess spray material is very important. If you have excess tank solution, it is best to dilute it with water and apply it to the area you previously treated.
- Never dump solution into a drain or near a lake or stream. Chemicals containers should be triple-rinsed, with the rinse water added to the sprayer tank. Do not burn empty chemical containers. Dispose of containers at recycling centers.


Handling Waste Product and Chemicals

- Waste products, such as, used oil, fuel, coolant, brake fluid, and batteries, can harm the environment and people:
- Do not use beverage containers for waste fluids - someone may drink from them.
- See your local Recycling Center or authorized dealer to learn how to **recycle or get rid of waste products**.
- A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques. The seller of the chemical products used with your machine is responsible for providing the MSDS for that product.

Assembly

Identify Parts and Assemble

15 Gallon Standard Tow Behind

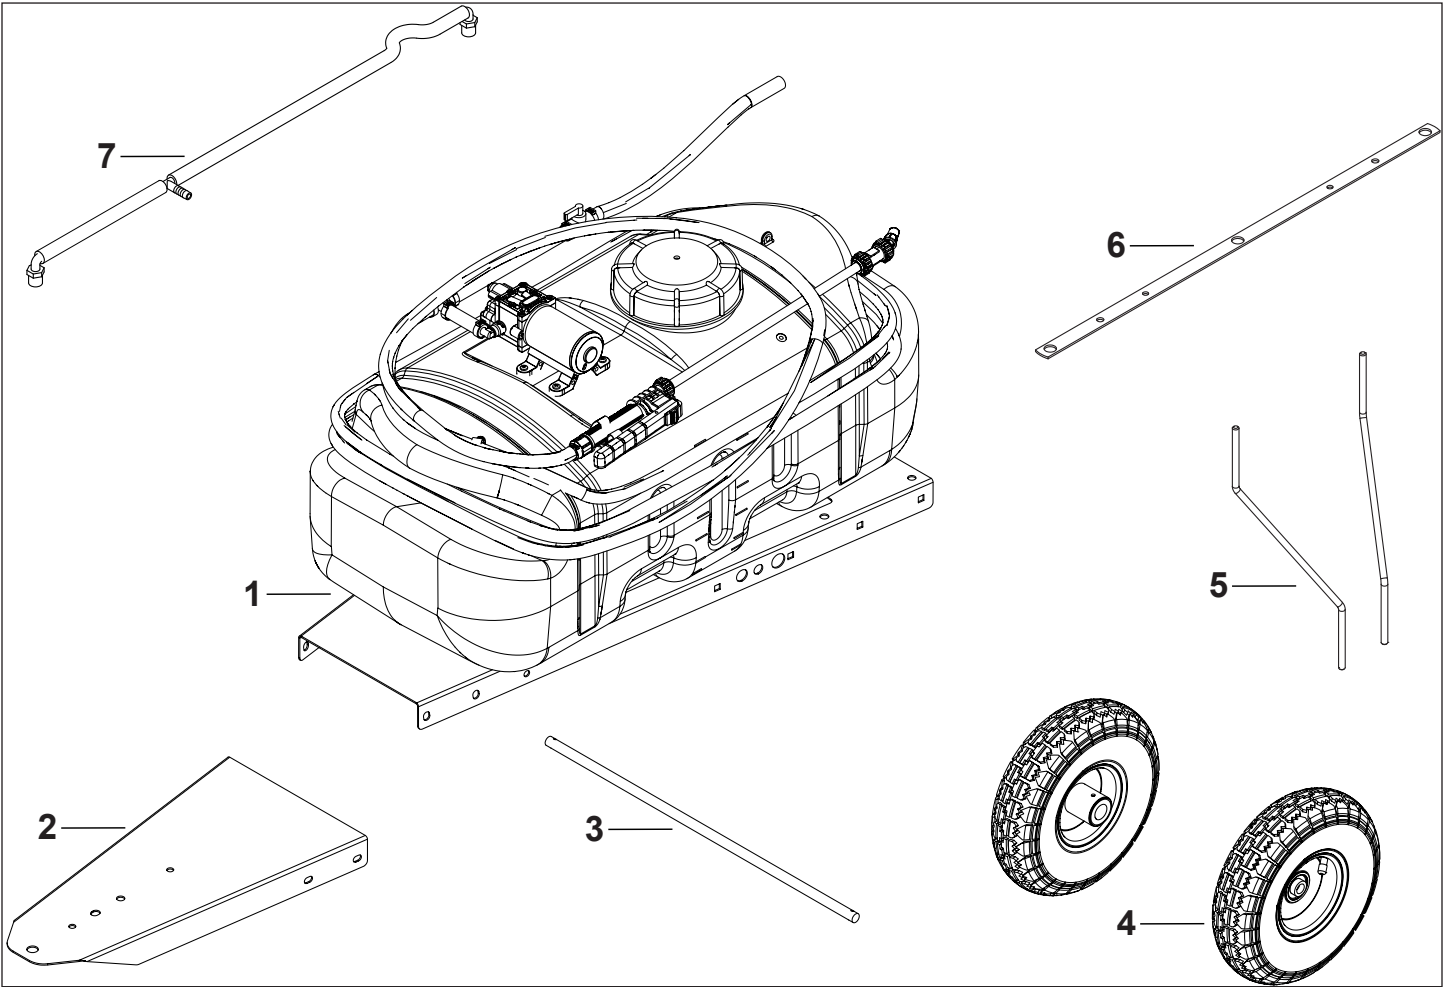


Components

	Part #	Description	Qty
1	—	Sprayer Base Unit (Tank with pump and hoses attached)	1
2	2-896BL3	Hitch Frame	1
3	2-746	Axle	1
4	45702Y	Wheels	1
5	ST43532	Boom Support Rods	2
6	ST43169BL3	Center Boom	2
7	6-1262	Boom Hose Assembly	1

Assembly

Parts Bag Contents

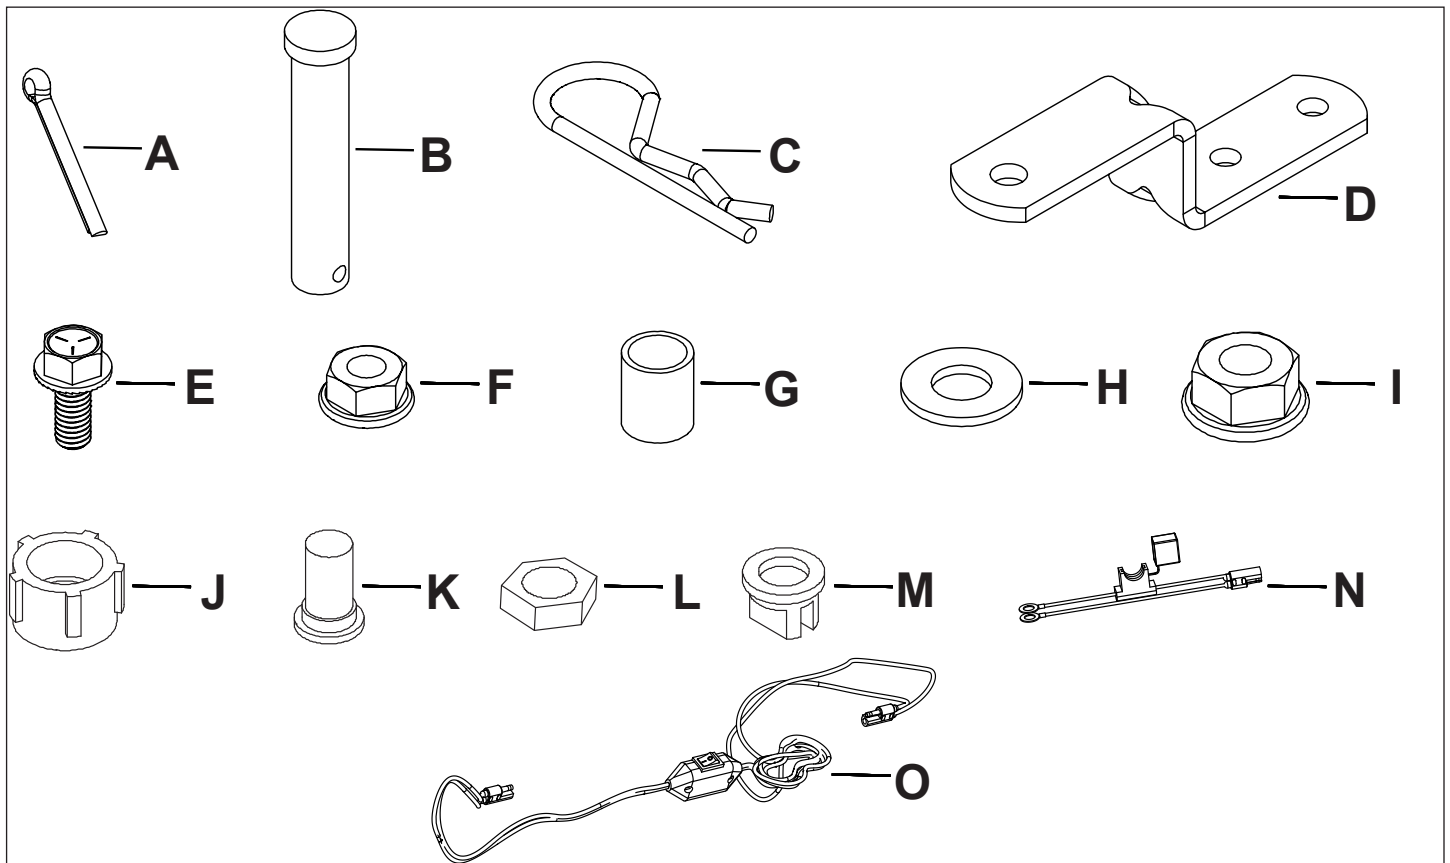


Components

	Part #	Description	Qty
A	41631	Cotter Pin, 1/8" x 3/4"	2
B	ST43468	Hitch Pin 1/2" x 2 1/2"	1
C	714-0117	Cotter Pin, 5/32" x 3" Hair	1
D	23014BL1	Hitch Clevis	1
E	ST65007	Flange Bolt 5/16" x 3/4"	6
F	46584	Flange Nut 5/16"	6
G	45705	Axle Spacer	2
H	1540-59	Flat Washer	4
I	44072	Flange Nut 3/8"	8
J	ST43012	Tip Fitting Cap Nut	2
K	ST43016	Spray Tip Screen w/ Check Valve	2
L	2-866	11/16" Nozzle Retaining Nut	2
M	2-882	Flat Fan Spray Tip	2
N	ST43483	Battery Wire Harness	1
O	ST43472	Switch Wire Harness	1
—	ST43314	Wire Harness Clip	2

Assembly

Attach Hitch Frame

1. Remove hardware bags and wiring harness from inside tank.

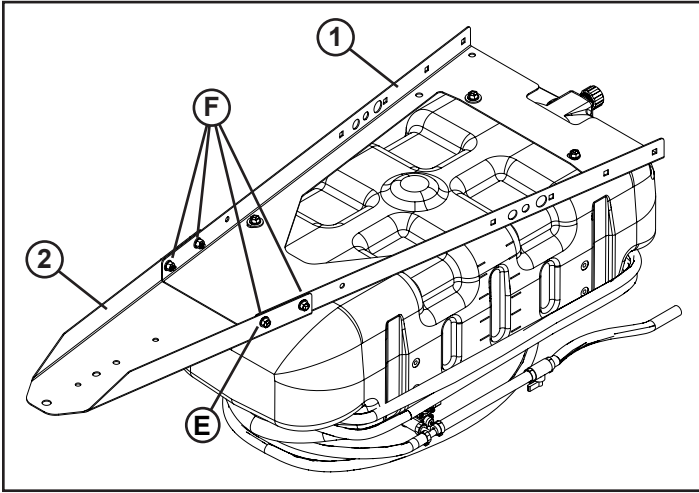


2. Place tank and frame assembly, with tank frame (1) on top, onto top of shipping box for installing hitch frame.

NOTE: When installing hardware, always install with nuts to the inside.

3. With tank frame (1) mounted to the inside of the hitch frame (2), align mounting holes on tank frame to mounting holes in hitch frame.
4. Install and tighten hardware:
 - (4) 5/16 x 5/8 in. Flange Bolts (E)
 - (4) 5/16 in. Flange Nuts (F)


Install Wheels

NOTE: Install wheels so tire valve stems face to the outside of the sprayer frame.

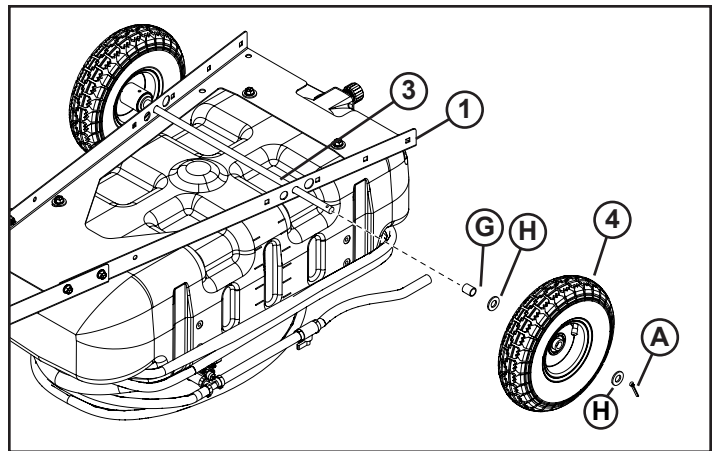

1. Install and center axle (3) into the smaller hole between the two bigger holes of tank frame (1). See illustration above.
2. Install axle spacer (G) and flat washer (H).
3. Install wheel (4), and then additional washer (H).
4. Secure with cotter pin (A) by bending the ends.
5. Repeat for opposite wheel.
Wheel hardware:
 - (2) Axle Spacers (G)
 - (4) Flat Washers (H)
 - (2) Cotter Pins (A)
6. Set sprayer on wheels.

Install Hitch Assembly

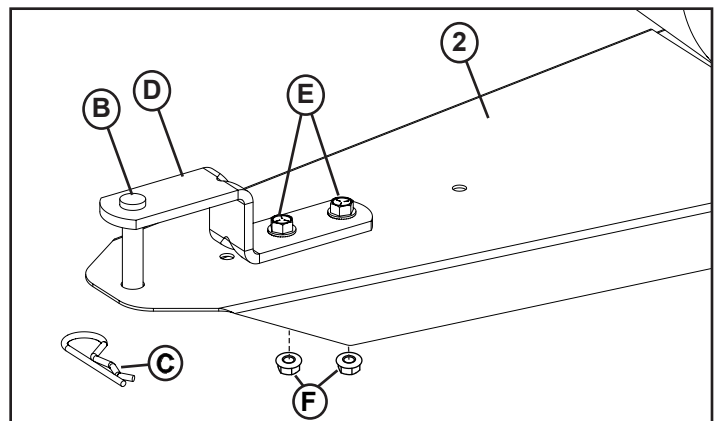


1. Install hitch clevis (D) on top of hitch frame (2) with hitch pin (B) and spring locking clip (C).
2. Install and tighten hardware:
 - (2) 5/16 x 5/8 in. Flange Bolts (E)
 - (2) 5/16 in. Flange Nuts (F)

Assembly

Assembling Boom Assembly


1. Install 3/8 in. flange nut (I) on boom support rod (5). Repeat for opposite side boom support rod.
2. Install the boom support rod into the center boom assembly and secure with a 3/8 in. flange nut (I). Repeat for opposite side boom support rod.
3. Tighten hardware.

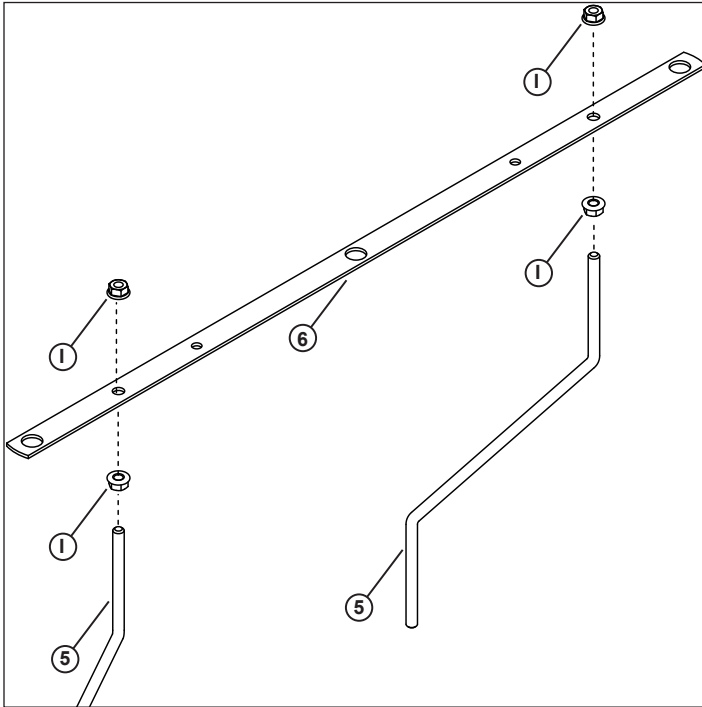

Attach Hose Assembly


1. Install the nozzle fitting elbow at the end of the hose assembly (7) into the end hole on the center boom (6) on each side.
2. Install the nozzle retaining nut (L) onto the nozzle fitting elbow on each side. Hand tightened.
3. Install the spray tip screen (K), spray tip (M), and cap nut (J) onto the nozzle fitting elbow on each side. Hand tightened.

NOTE: Make sure the spray tip is aligned with the center boom (6).

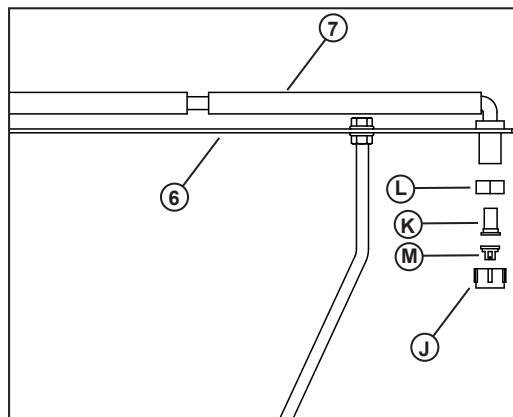

Installation


Install Boom Assembly

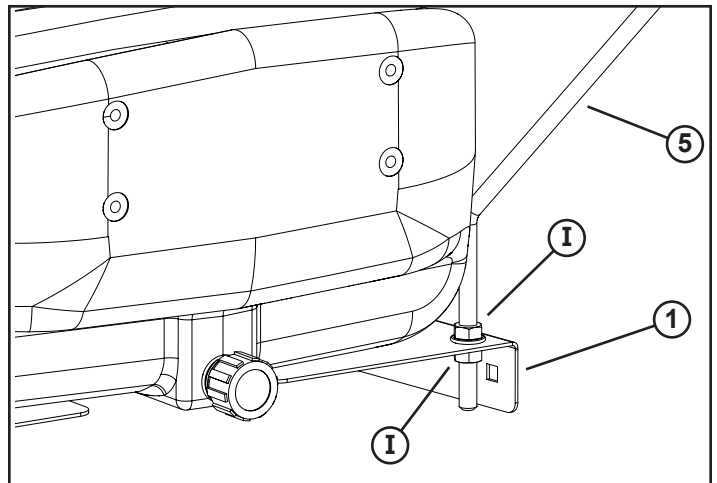

1. Install 3/8 in. flange nut (I) on boom support rod (5). Repeat for opposite side boom support rod.


NOTE: Boom assembly should be installed with hose connection tee facing forward and on the right side.

2. Install entire spray boom and support rods through rear holes in tank frame (1).
3. Install a second 3/8 in. flange nut (I). Repeat for opposite side.
Boom support hardware:
 - (4) 3/8 in. Flange Nuts (I)
4. Do not tighten boom hardware until entire boom is in place.
5. Connect tank hose onto tee on boom hose.

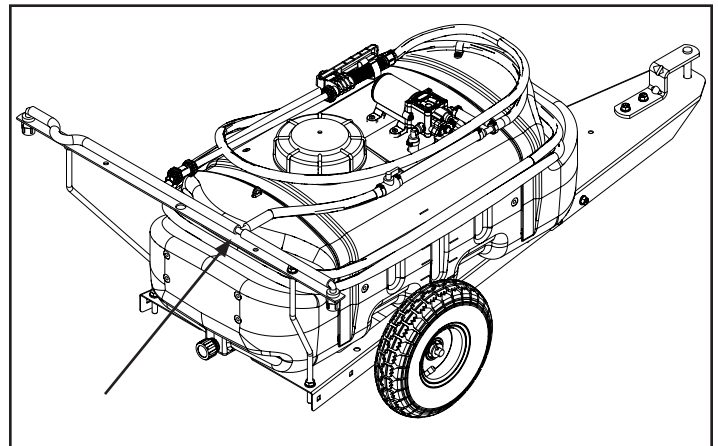

Installation

Level Sprayer

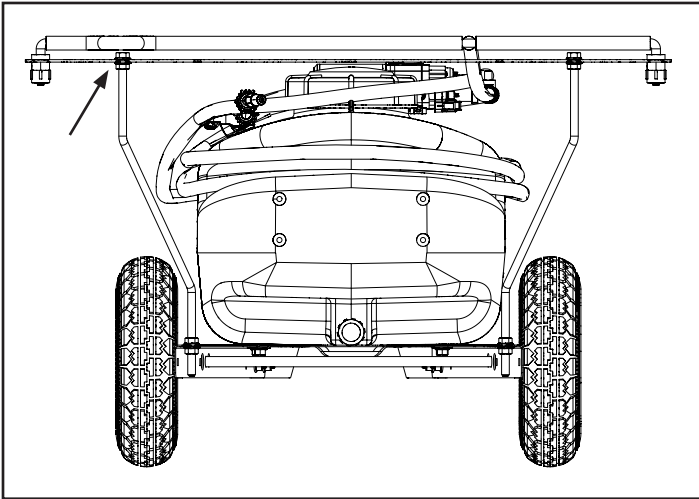


1. Level, straighten and center boom with back of sprayer.
2. Tighten hardware:
 - (4) Nuts, 3/8 in.

Install Wiring Harness to Battery


IMPORTANT: Avoid damage! To help prevent electrical spark, install red wire to the positive (+) battery terminal first. Then install black wire to negative (-) battery terminal. To prevent damage to wiring, make sure hood does not close on wires connectors

NOTE: Depending on the location of your battery, a wiring harness-extension may be required. Part numbers are AM105666 (John Deere) or ST43485 -2ft, ST43509-8ft (Agri-Fab). See your John Deere dealer to order parts.

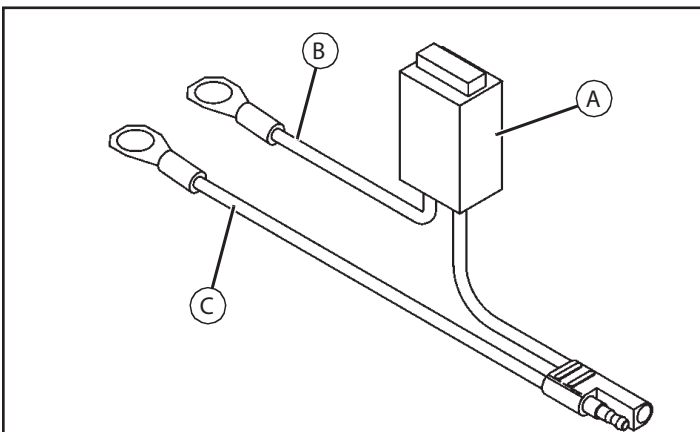

1. Fuse holder (A) should contain a 15 A / 32 V fuse. Make sure fuse filament is not broken.
2. Open hood. If battery is mounted low and behind the grille, carefully unsnap top of grille to provide access to battery terminals.
3. Remove nut from positive (+) battery cable clamp. Install red lead (B) onto clamp bolt. Install and tighten nut completely.
4. Remove nut from negative (-) battery cable clamp. Install black lead (C) onto clamp bolt. Install and tighten nut completely.

Install Wire Clips

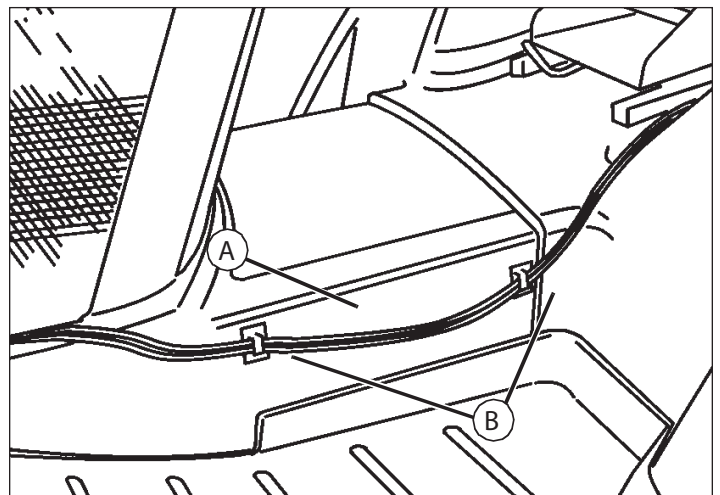

1. Clean foot rest side panel (A) at left side of machine with mild detergent or isopropyl alcohol. Dry thoroughly.
2. Attach wire clips (B) to panel. Position the clips as shown so that sprayer main wiring harness will not interfere with deck height adjustment crank, if equipped.

Preparing Vehicle

Machine Requirements

Sprayer Weight:

- 15 Gallon Sprayer, Filled with liquid is 74 kg (164 lb)

IMPORTANT: Avoid damage! No rear suitcase weights or grass bagging attachments should be installed on machine while using sprayer

Make sure machine tire pressure is correct. (See your machine operator's manual for the correct pressure.)

Machine weights improve stability. Add front weights for better front-end stability and steering. See your John Deere dealer for these weights. Instructions to install will come with the weights.

Your machine requires the following:

- 12-Volt Battery and Alternator
- Wiring Harness Extension: This part is required for all machines with the battery mounted near the front grille. Order this wiring harness from your John Deere dealer. ST43485-24in or ST43509-8ft

Pump Pressure Switch

The pump pressure switch turns off the pump when it reaches its maximum pressure setting. Very low flow demand may cause the switch to rapidly cycle the pump on and off. Rapid on and off cycling must be limited to no more than 6 times per minute. Cycling could cause the motor to heat beyond the recommended maximum temperature and reduce the operational life of the pump and pressure switch.

Operation

Filling Sprayer Tank

⚠ CAUTION: Avoid injury! Chemicals can be dangerous. Avoid injury to operator or bystanders:

- Read chemical container label for mixing and handling instructions. A Material Safety Data Sheet (MSDS) should be supplied by the chemical dealer and provides proper safety information.
- Wear proper clothing and safety equipment while handling or applying spray chemicals.
- Wear a full covering of clothing, protective goggles and rubber gloves.
- Prohibit all smoking, drinking, and eating around chemicals.
- When filling tank, never allow end of water hose to contact chemical mixture.

1. Clean area around tank filler cap to prevent tank contamination.
2. Remove tank filler cap and fill tank.

Transporting Tow Behind Safely

- Push pump switch to off position.
- Use caution when transporting the sprayer to help prevent possible injury.
- When sprayer is filled with liquid, the extra weight on the back of a machine could change the stability of the machine.

Sprayer weight:


15 Gallon Sprayer - Filled with liquid is 74 kg (164 lb)

Spraying Tips

- Check sprayer tip height. Adjust sprayer tip height, if needed, before operating. 15 Gallon Sprayer, 43 cm (17 in.)
- Do not let sprayer run in one spot.
- Do not over spray when you use weed killers.
- Liquid spray material is recommended. Sprayer does not agitate wettable powders.
- Timely applications of a smaller dosage are better than large applications.
- Turn sprayer off during turns to avoid double spraying.
- Fill sprayer where spills cannot harm grass.
- Follow manufacturer's recommendations for application of specific chemicals.
- Stop sprayer when tank is empty.


Adjusting Tip Height

1. Attach sprayer to machine.
2. Measure from spray tip to ground. Distance to ground (X) should be approximately: 43 cm (17 in.)

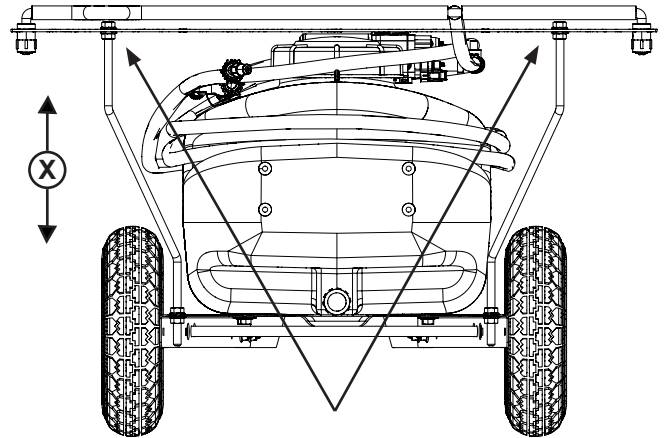

If necessary, adjust boom height by raising or lower the boom on the threaded boom supports (B).

3. Check spray tips (M). Tips should be aligned with boom (6) as shown. If necessary, loosen spray tip cap nut (J). Align spray tip (M) and tighten cap nut.

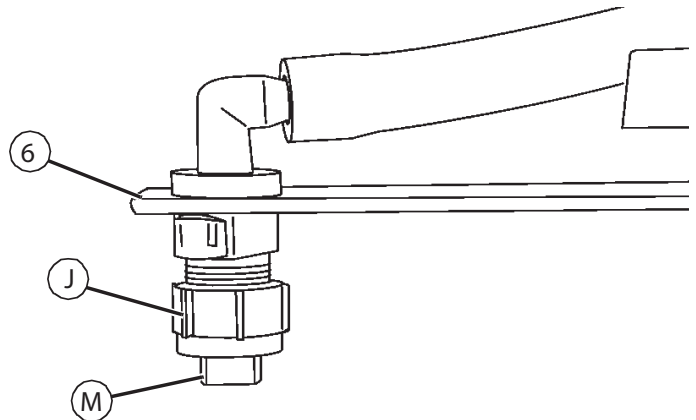


4. Test spray pattern with water on driveway or sidewalk. Each spray tip pattern should spread out to the right and left sides, rather than to the front and back of the boom. There should be some spray overlap between each tip and the spray patterns should be consistent.

Operation

Starting and Stopping Sprayer


IMPORTANT: Avoid damage! Operate sprayer with transport vehicle running to avoid discharging the battery.

NOTE: The sprayer pump to battery hookup is a direct electrical connection. Shutting off the transport vehicle does not prevent operation of the sprayer pump. To avoid accidental spraying, disconnect the pump connection before leaving the sprayer.

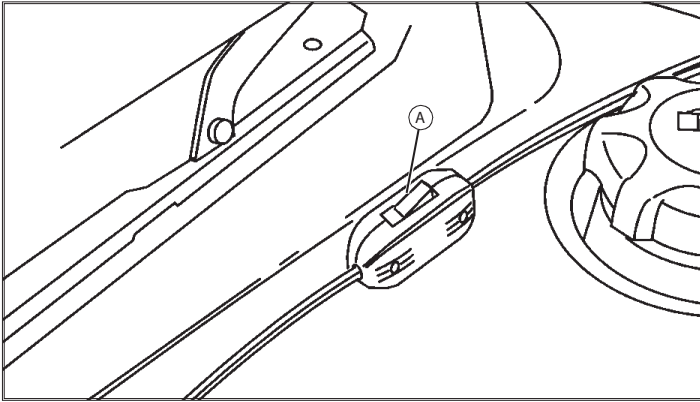

Push switch (A) to on or off position to start or stop sprayer

Standard Sprayers

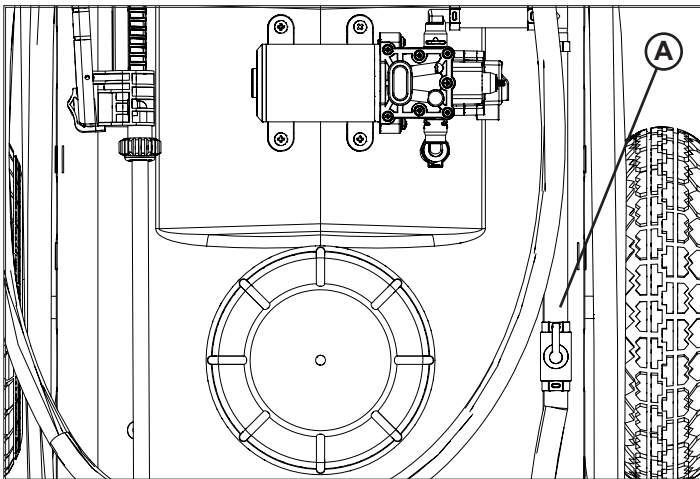

Valve (A) is used to control spray to the spray wand or boom:

- In the open position (valve in line with hose) spray will flow to the boom.
- In the closed position (handle perpendicular to hose), spray will flow to spray wand only.

Using the Sprayer




CAUTION: Wear eye and hand protection and protective clothing when handling and working with lawn chemicals.

1. Determine the application rate (gallons per 1,000 sq. feet) based on the chemical manufacturers recommendations.
2. Estimate the size of the area to be sprayed and the amount of solution that will be needed. This can help avoid unneeded solution left in the tank.
3. Refer to the application chart below to help determine the speed required to achieve the manufacturers recommended application rate.
4. Add the chemical solution to the tank, following the manufacturers recommendations.
5. Begin spraying by turning switch to "ON", making each pass so that the spray pattern slightly overlaps the spray pattern from the previous pass.
6. Stay clear of flowers, shrubs and evergreen trees when spraying to prevent contact of the solution with these sensitive plants.

Application Chart

Sprayer	Tip Size	PSI	GMP One Nozzle
15 Gallon	0.4 GPM 110 deg	45	0.42

Sprayer	Gallons per 1000 Sq. Ft.				
	2 mph	3 mph	4 mph	5 mph	6 mph
15 Gallon	0.95	0.63	0.48	0.38	0.32

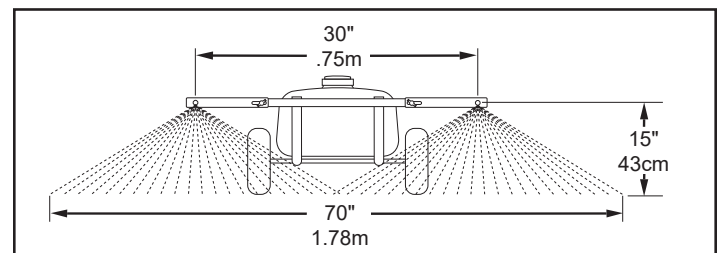

Operation


Using Hand Wand

NOTE: For full spray wand pressure the boom in-line valve must be closed.

1. Adjust nozzle:


- Nozzle Angle – Loosen locknut (B). Turn the nozzle tube (C) to the desired position and tighten the locknut.
- Nozzle Spray Pattern – To change the spray pattern, tighten or loosen nozzle as desired.

NOTE: Removal of spray tip (A) allows for quick cleaning/rinsing of sprayer tank.

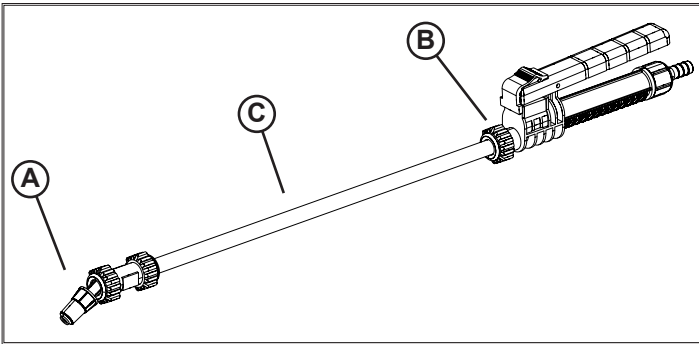

2. Squeeze the handle (E) to spray.


3. Push lock (D) forward to lock handle in ON position.

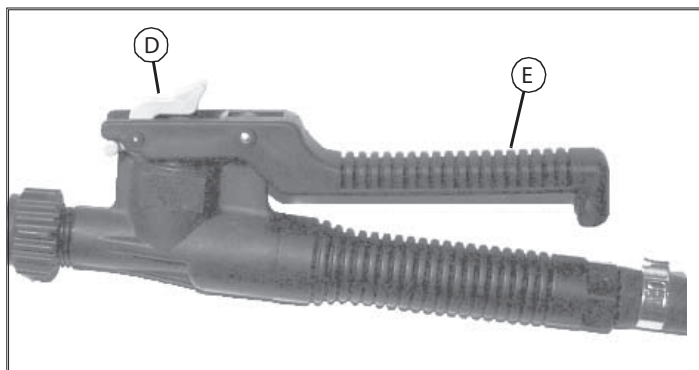

Removing and Storing

Removing Sprayer

1. Park machine safely. (See Parking Safely in the Safety section.)
2. Empty the sprayer tank.
3. Disconnect the main wiring harness only. Leave all other harnesses installed on machine.
4. Roll up the main harness and store with sprayer.
5. Remove Sprayer:
 - Pull pin (C) out of hitch pin (B). Remove hitch pin (B).
 - Pull sprayer back from machine.
 - Put hitch and spring locking pin in sprayer hitch for storage.

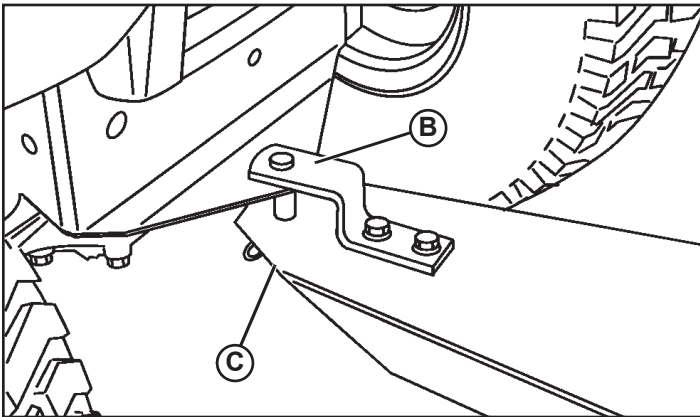

Draining and Cleaning Sprayer Tank

IMPORTANT: Avoid damage!

- **Proper disposal of excess spray is very important. Dilute it with water and apply it to area previously treated.**
- **Never dump excess into a storm drain or near a lake or stream.**

1. Remove tank drain cap, and empty sprayer tank:
 - Empty remaining solution into an appropriated container for proper disposal.
 - Pump 2 gallons of clean water through all wet components.

Note: Use individual containers to catch water from spray tips. Properly dispose of clean out fluid.

2. Spray all inside surfaces of tank with low pressure garden hose to remove any remaining solution. Rinse several times to make sure sprayer tank is clean and free of chemicals.
3. Replace drain cap and run fresh, clean water through pump, sprayer wand and all hoses thoroughly.
4. Once the tank is empty, wipe out inside of sprayer tank with a clean cloth or paper towel.

Store Sprayer Safely


1. Ensure sprayer tank is cleaned and drained.
2. Remove sprayer from transport vehicle.
3. Check sprayer for worn or damaged parts. Replace parts as needed.
4. Tighten loose hardware.

WINTER STORAGE

1. Empty and rinse tank.
2. Put one to two gallons of water in tank.
3. Engage pump and spray with boom and spray wand. Ensure that the water has been pumped through entire system, including all spray nozzles.
4. Run the pump dry for no more then 10 seconds.
5. Store sprayer in a dry location away from elements

Service

Checking Tire Pressure

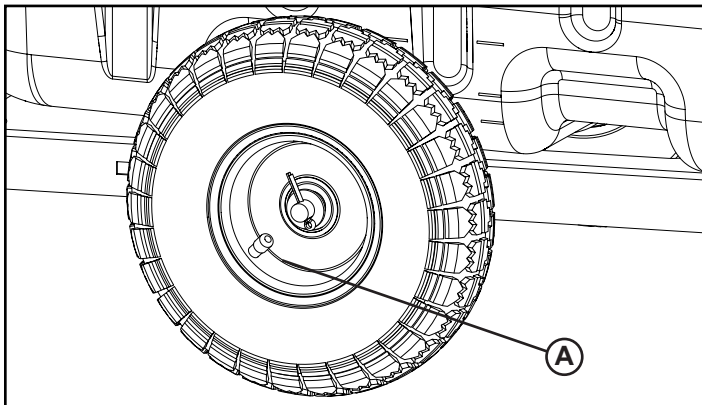

Check tire pressure at point (A).


- Tire pressure should be 207 kPa (30 psi).

Tire Size:

- 15 Gallon Sprayer, 4.10 x 3.50 - 4

Clearing Spray Nozzle

CAUTION: Avoid injury! Do not put nozzle tip or other sprayer parts to your lips to blow out dirt. Use compressed air or clean water.

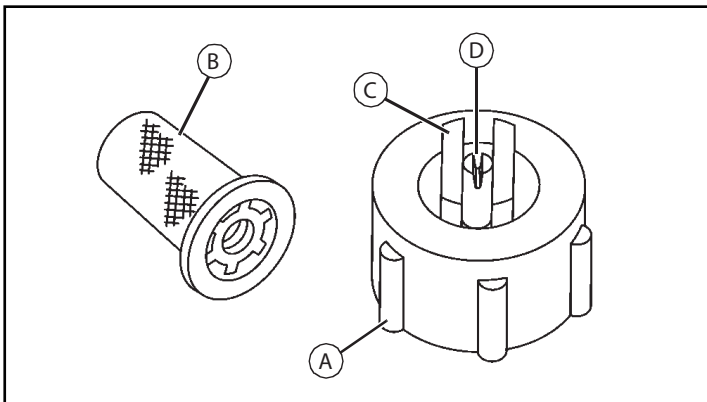

1. Remove spray nozzle (A) from sprayer.
2. Disassemble filter (B) and spray tip (C).


NOTE: Do not use a wire to clean opening (D) in spray tip.

3. Wash filter and spray tip in a non-flammable solvent.
4. Put spray tip in spray nozzle.
5. Put flat side of filter in spray nozzle.
6. Install assembly on sprayer and tighten nozzle.

Cleaning Spray Wand Nozzle


NOTE: There are two different styles of nozzles for your sprayer. See below for explanation of each style.

CAUTION: Avoid injury! Do not put nozzle tip or other sprayer parts to your lips to blow out dirt. Use compressed air or clean water.

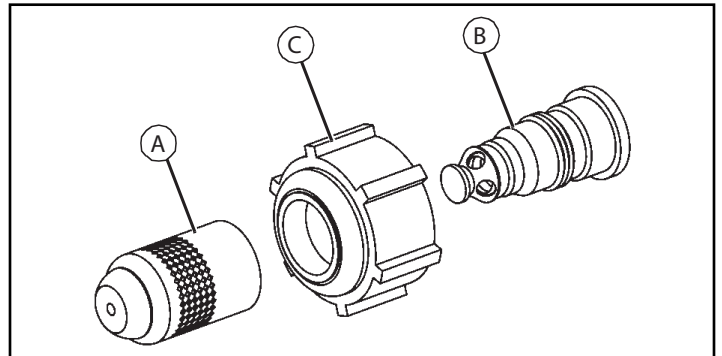

1. Remove nozzle (A) from the spray tip (B).
2. Loosen nut (C), and remove the spray tip (B) from the angled fitting on the wand.
3. Wash nozzle (A), and spray tip (B) with liquid detergent and warm water.
4. Inspect O-rings and replace as needed.
5. Slide nut (C) over the spray tip (B), and install on angled fitting on wand.
6. Install nozzle (A) on spray tip (B).

Cleaning Pump Suction Screen

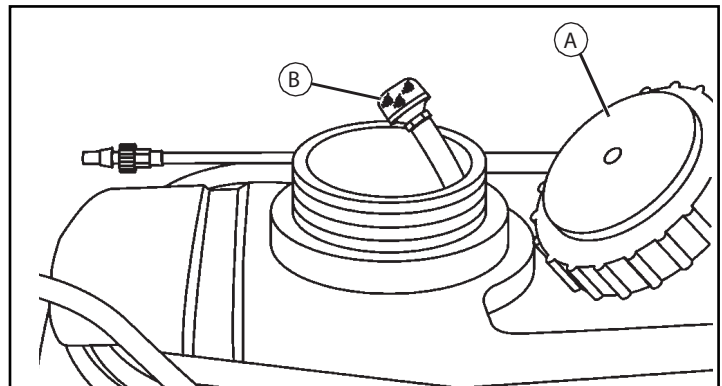


1. Remove tank cover (A).
2. Locate suction screen (B) inside sprayer tank.
3. If necessary, unscrew suction screen and clean with liquid detergent and warm water.
4. If suction screen was removed, install on suction hose and position in lowest depression inside tank.
5. Install and tighten tank cover.

Service

Changing Fuse

IMPORTANT: Avoid damage! The electrical system may be damaged if incorrect replacement fuses are used. Replace the bad fuse with a fuse of the same amp rating.

1. Open hood.

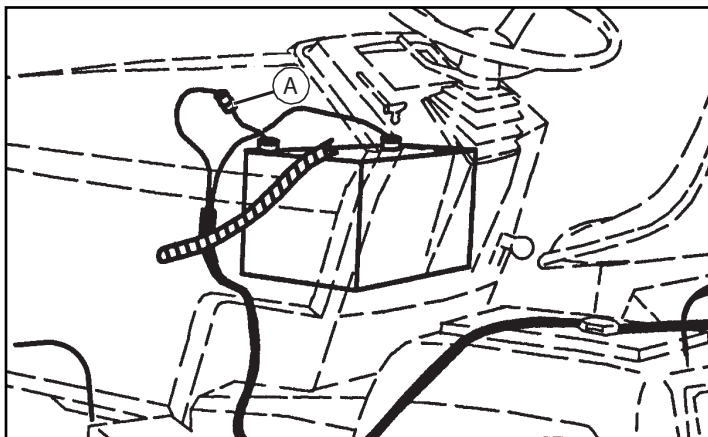

2. Remove fuse (A).
3. Install new 15 amp fuse.
4. Close hood.

Troubleshooting

Using Troubleshooting Chart

If you are experiencing a problem that is not listed in this chart, see your authorized dealer for service.

When you have checked all the possible causes listed and you are still experiencing the problem, see your authorized dealer.


Problem	Solution
Irregular spray pattern	• If spray pattern is not aligned with the boom, loosen the spray tip nut, rotate spray tip and retighten nut. • If spray tip(s) exhibit an un-uniform spray pattern, clean spray tip and strainer with clean water.
Spray pressure in boom and spray wand is weak	• Clean tank strainer (refer to maintenance section) • Ensure boom valve is fully open for boom use and closed for spray wand use
Pump will not self-prime Note: It is common for the pump to not self-prime the first use or after extended storage.	To prime pump 1. Open boom valve or spray wand handle. 2. Pull intake hose out of tank lid and remove strainer. 3. Fill hose with water, re-attach strainer and turn on pump. 4. When water begins to spray place intake hose back in sump at bottom of tank. 5. Repeat if needed.
Pump cycles continuously when not spraying	Check sprayer for leaks and repair as needed.

Specifications

Model 15 Gallon Tow Behind Sprayer

Tank	.57 L (15 gallon)
Pump:	
Type	Electric Motor and Diaphragm
Manufacturer	Remco
Current Draw	.7 amp
Fuse	.15 amp
System Pressure	689 kPa (100 psi)
Spray Rate	.3 L/min. (.8 gal./min.)
Suction Hose Strainer.	Stainless Steel
Spray Tip Material	Plastic
Handgun:	
Material.	Plastic with Plastic Tip
Adjustment.	Fan To Stream
Sprayer:	
Nozzle Tip Height	43 cm (17 in.)
Spraying Width	229 cm (90 in.)
Weight:	
Empty.	20 kg (44 lb)
Full.	74 kg (164lb)

Parts Diagram

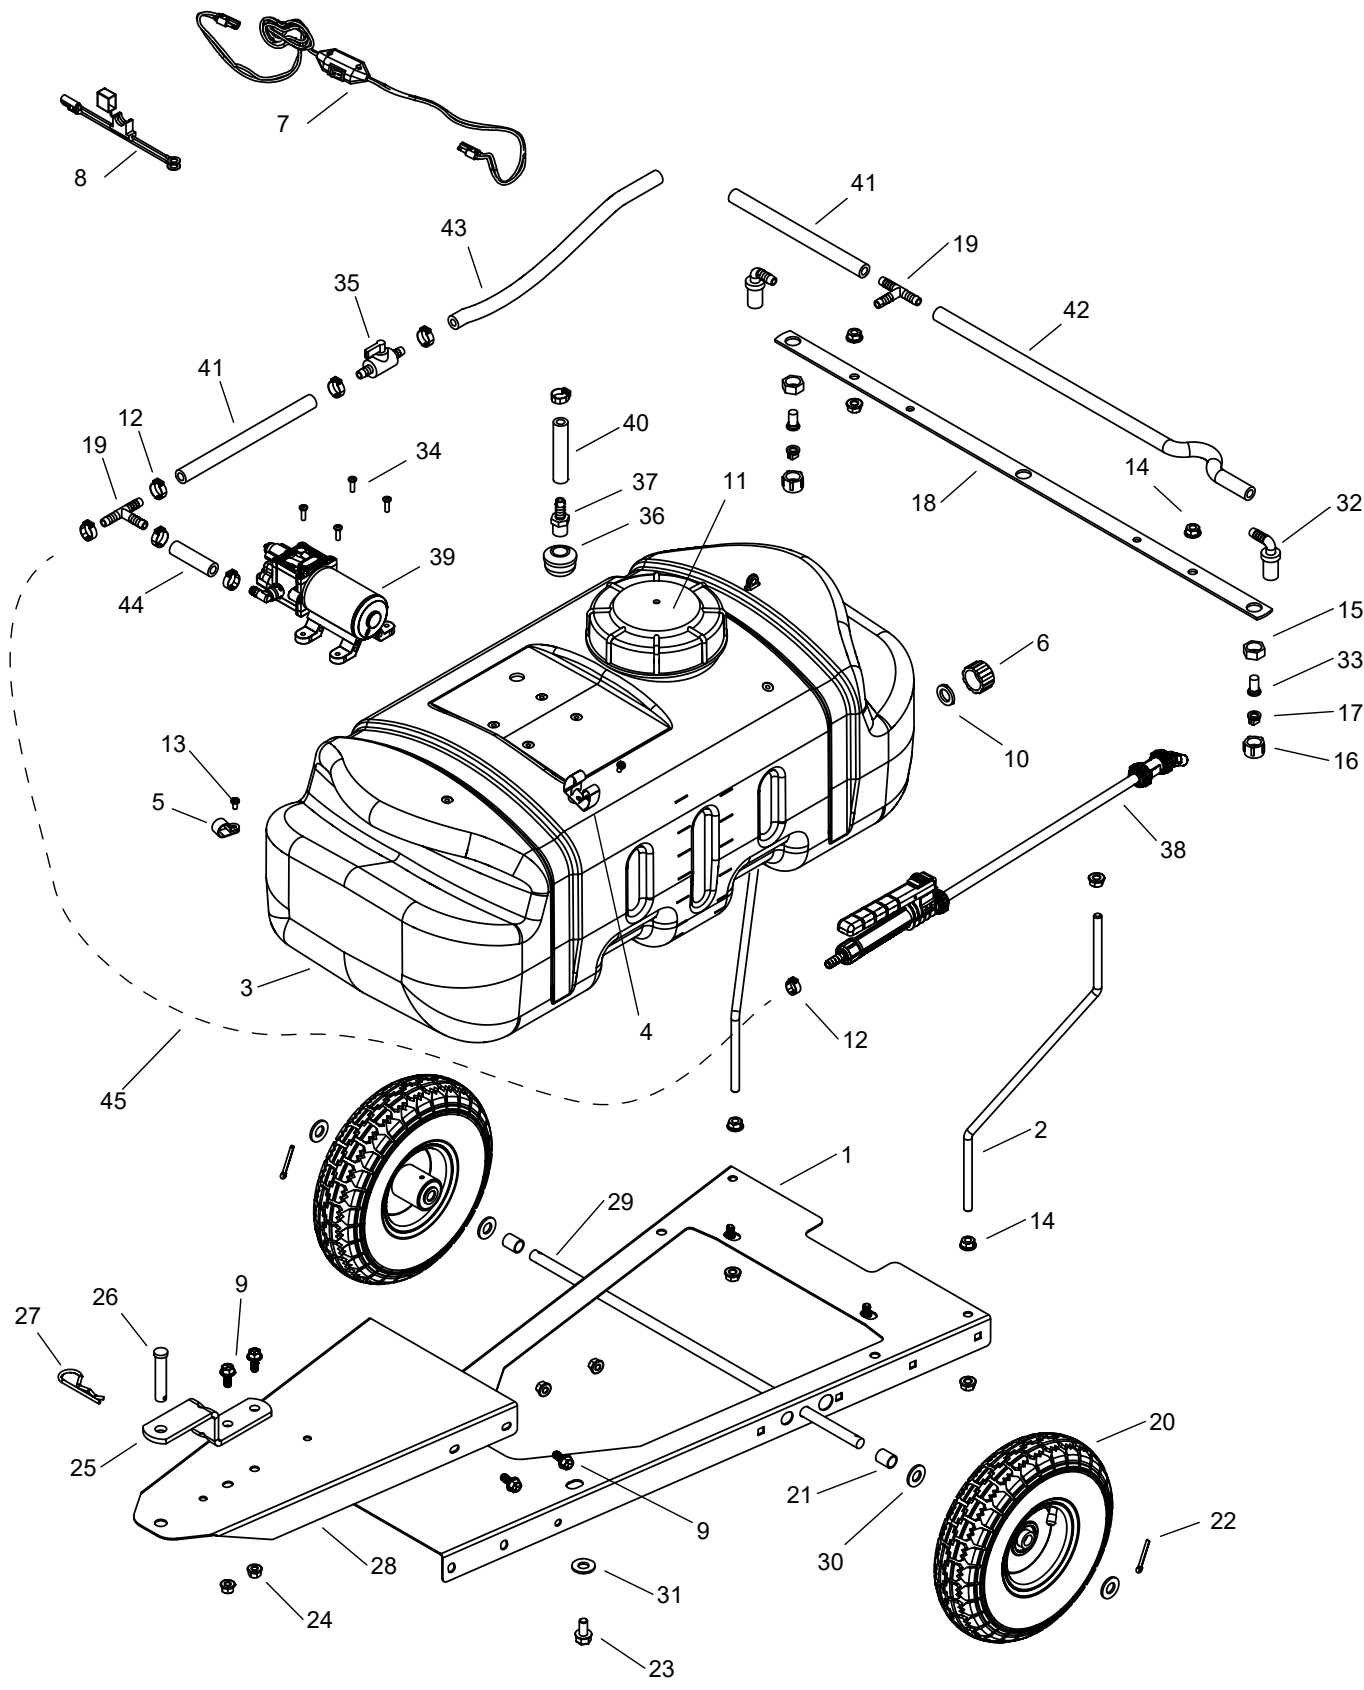

ITEM #	DESCRIPTION	PART #	QTY.
1	Sprayer Frame - Tow	2-805BL3	1
2	Boom Support Rod	ST43532	2
3	Tank 15 Gallon	2-1051	1
4	Holder for Spray Wand (Large)	ST43287	1
5	Hose Holder 3/8"	ST43191	1
6	Cap, 3/4" GHT	48719	1
7	Wire Harness Switch	ST43472	1
8	Wire Harness Battery	ST43483	1
9	5/16 x 3/4 Flange Bolt	ST65007	6
10	Washer For Drain Cap	ST43684	1
11	Tank Lid 6"	ST43175	1
12	Hose Clamp 3/8" Screw Type	ST43652	8
13	Screw, 10-24 X 3/8 PL	46677	2
14	Nut, Hex 3/8-16 Whizloc	44072	8
15	Nut, 11/16" Nozzle Retaining	2-866	2
16	Tip Fitting Cap Nut	ST43016	2
17	Spray Tip, 110 Flat Fan, 0.4	2-882	2
18	Boom	ST43169BL3	1
19	3/8 Barbed, Tee	ST43013	2
20	Wheel & Tire Assy 4.10/3.5-4	45702Y	2
21	5/8 x 3/4 Axle Spacer	45705	2
22	Pin, Cotter 5/32 X 1-1/4	41631	2
23	5/16 x 5/8 Flange Bolt	ST65011	4
24	5/16 Flange Nut	46584	6
25	Bracket, Hitch	23014BL1	1
26	Hitch Pin	ST43468	1
27	Pin, Hair Cotter 5/32 X 3	714-0117	1
28	Hitch Triangle - Tow	2-896BL3	1
29	Axle 1/2"	2-746	1
30	1/2" Washer	1540-59	4

ITEM #	DESCRIPTION	PART #	QTY.
31	Washer, .438 X 1 X .083	43070	4
32	3/8" Elbow Fitting w/Nut	ST43011	2
33	Spray Tip Screen	ST43016	2
34	Screw, Pan #10-24 X 5/8 PHIL.	ST65258	4
35	3/8 Barbed, In-line Valve	ST43014	1
36	Sump Strainer 3/8"	ST43258	1
37	3/8" Straight Barbed Fitting	ST43182	1
38	Spray Wand w/ Tip	2-1050	1
39	Pump, Remco 1.6 Gpm 100 PSI	ST43790	1
40	Hose, 3/8" X 14.75"	2-337	1
41	Hose, 3/8" X 8.5"	2-319	2
42	Hose, 3/8" X 22"	2-314	2
43	Hose, 3/8" X 15.5"	2-324	1
44	Hose, 3/8" X 2.5"	2-317	1
45	Hose, 3/8" X 180"	2-1049	1
-	Fitting/Pump Quick Attach O-Ring (one on each side)	2-1468	2
-	7/16" OD Pump O-Ring (one on each side)	2-1480	2
-	Lanyard For Tank Fill Cap	ST44017	1
-	Clip, Plastic Wire Harness	ST43314	2
-	Leaping Deere Label	JD5711	1
-	Label, Warning - Chemical Hazard	MT3980	1
-	Owners Manual	3-453	1

Getting Quality Service

John Deere Quality Continues with Quality Service

John Deere provides a process to handle your questions or problems, should they arise, to ensure that product quality continues with quality parts and service support.

Follow the steps below to get answers to any questions you may have about your product.

1. Refer to your attachment and machine operator manuals.
2. In North America or Canada, call John Deere Special Services at 1-888-867-2238 and provide product serial number (if available) and model number.

Warranty

Limited Warranty for New John Deere Licensed Products

Agri-Fab's sprayers are guaranteed to be free from defects in material and workmanship from the date of purchase for 2 years residential use, 6 months commercial use, provided that the purchaser properly assembles, installs, uses and maintains the products in accordance with this manual. Purchaser's failure to adhere to such requirements will void the warranty. To the extent permitted by applicable law, all other warranties, representations, obligations and conditions, expressed or implied, including but not limited to implied warranties of merchantability, fitness for any particular purpose and non-infringement, are hereby disclaimed and excluded. Any product which does not meet warranty shall, as purchaser's sole and exclusive remedy, be repaired or replaced by Agri-Fab. This warranty is non transferrable.

In addition, our warranty does not cover:

- Loss or consequential, incidental or special damages of any kind
- Breakage of parts as a result of freezing - fittings, hand wands and pumps may crack if liquid is left inside at freezing temperature

This product was manufactured by Agri-Fab, Inc, a John Deere Licensee, located at 809 S Hamilton Street Sullivan, IL 61951. If you have any questions or concerns with the assembly, installation, or operation of this attachment, see your local John Deere dealer or call Agri-Fab at 1-800-448-9282 for assistance.

