


ASSEMBLY INSTRUCTIONS

(SEE ILLUSTRATION BELOW)

NOTE: Do not tighten until all bolts are assembled.

1. Assemble a washer (Ref. 8), a spacer tube (Ref. 6) and another washer (Ref. 8) onto each end of the roller.
2. Assemble a flange bearing (Ref. 7) through each side tube (Ref. 3) so that the flange end of the bearing will face toward the roller. (To assemble, you may need to carefully tap against the flange bearing with a block of wood or a hammer.)
3. Place the side tubes (Ref. 3) onto both ends of the roller. Assemble the scraper bar (Ref. 2) to the side tubes using two hex bolts (Ref. 10) and hex lock nuts (Ref. 11).
4. Assemble the side tubes (Ref. 3) to the handle tube (Ref. 4) using four hex bolts (Ref. 10) and hex lock nuts (Ref. 11).
5. Assemble the tow hitch bracket (Ref. 5) to the handle tube (Ref. 4) using one hex bolt (Ref. 9) and hex lock nut (Ref. 11). The bracket is shown in the tow position. For a push roller, remove the bracket or reverse its position. **Tighten** all bolts at this time.

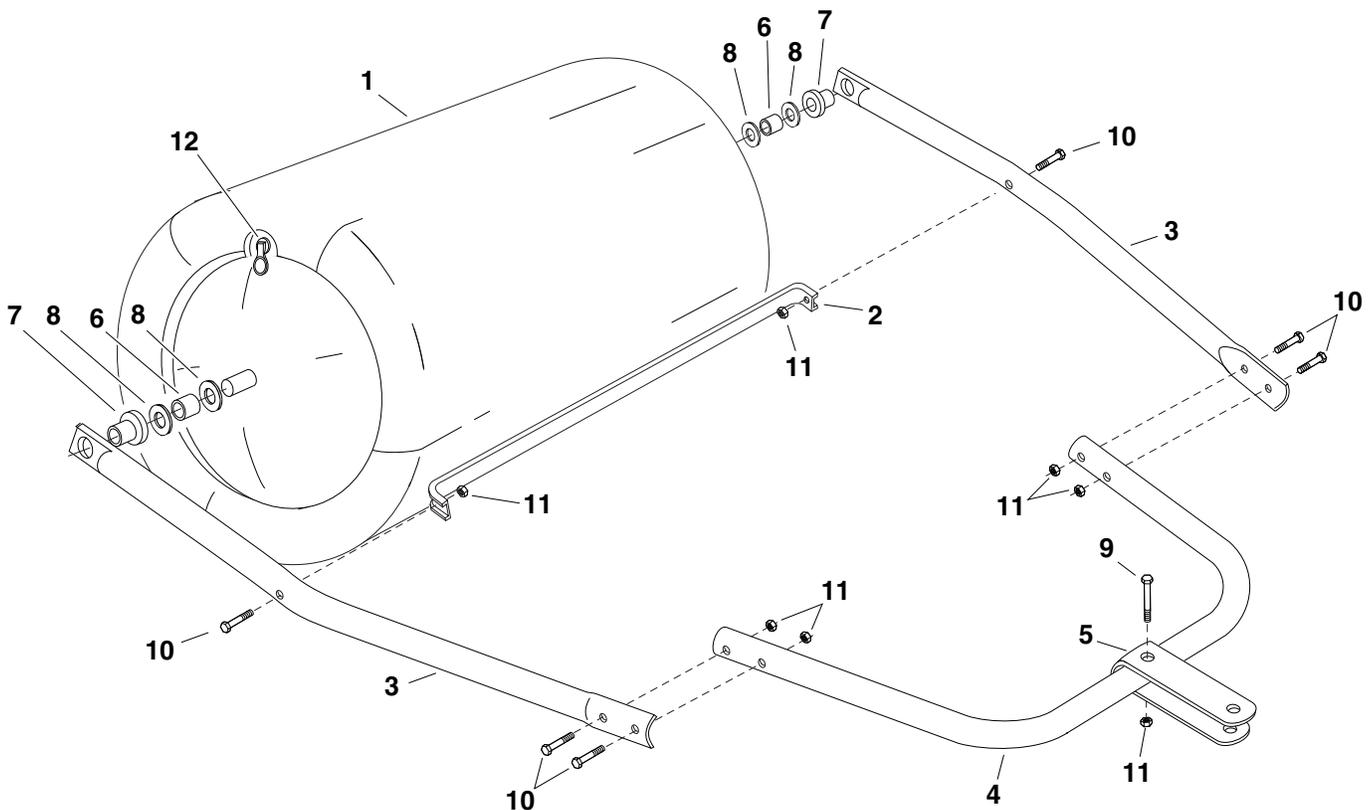

PARTS LIST FOR POLY LAWN ROLLER - MODEL 45-0267

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	46844	1	Lawn Roller Ass'y	7	44798	2	Nylon Flange Bearing
2	24222	1	Scraper Bar	8	43009	4	Washer, 1.59" x 25/32"
3	46841	2	Side Tube	9	43224	1	Hex Bolt, 5/16-18 x 2-1/4"
4	46842	1	Handle Tube	10	43084	6	Hex Bolt, 5/16-18 x 1-3/4"
5	24221	1	Tow Hitch Bracket (Clevis)	11	43064	7	Hex Lock Nut, 5/16-18
6	46838	2	Spacer Tube	12	43709	1	Plug, Lawn Roller

REPAIR PARTS
 303 W. Raymond St.
 Sullivan, IL. 61951
 (217) 728-8388