

Quick Start Guide


45-04924 Push Spreader

Read the manual that came with your Push Spreader for:
 • Important safety warnings
 • Further explanation of features
 • Operating instructions and flow control adjustments

Problem?
 Call 1-800-448-9282


Agri-Fab

HARDWARE PACKAGE

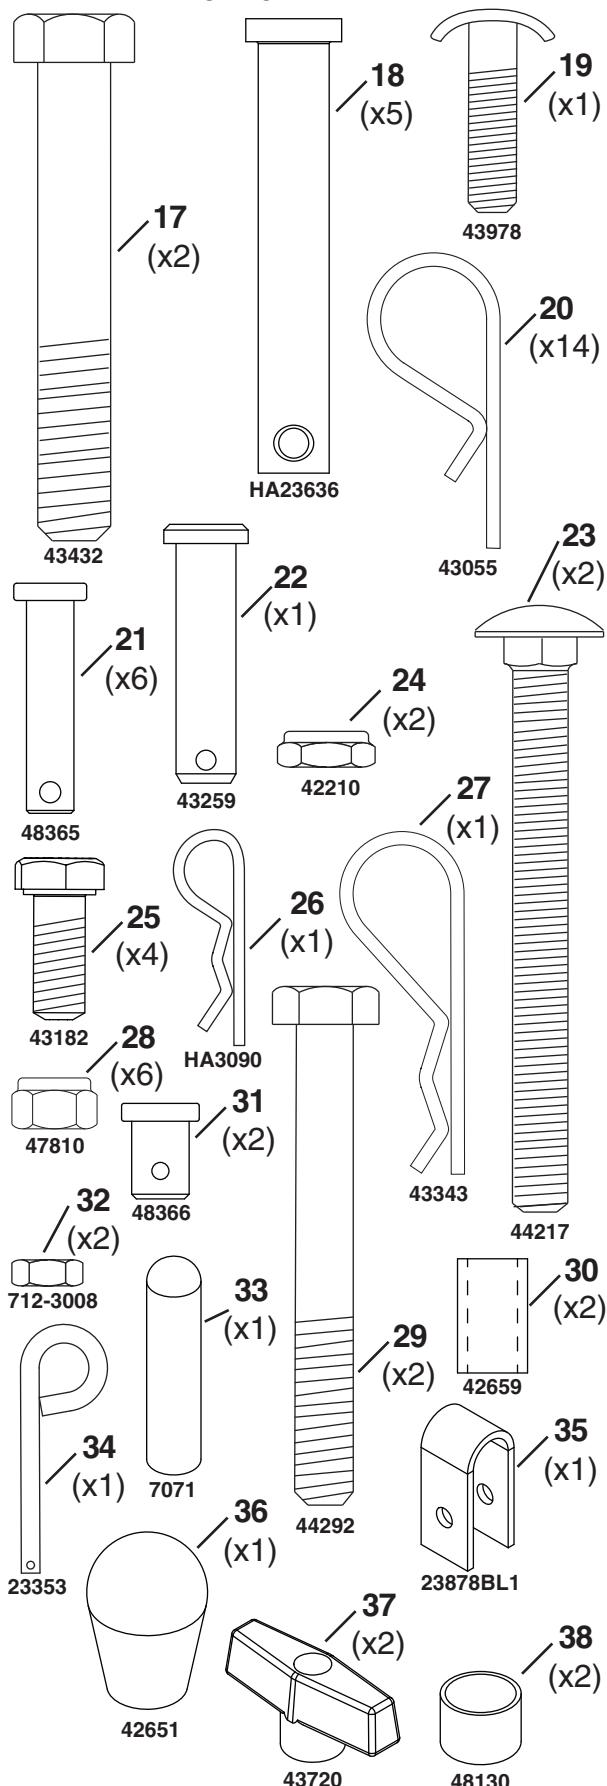


Assembly Step 1

1. Attach the drawbar (8) and both drawbar brackets (1) to the sweeper using a 3/8 x 2-1/4" clevis pin (18) and 3/32" hair pin (20).

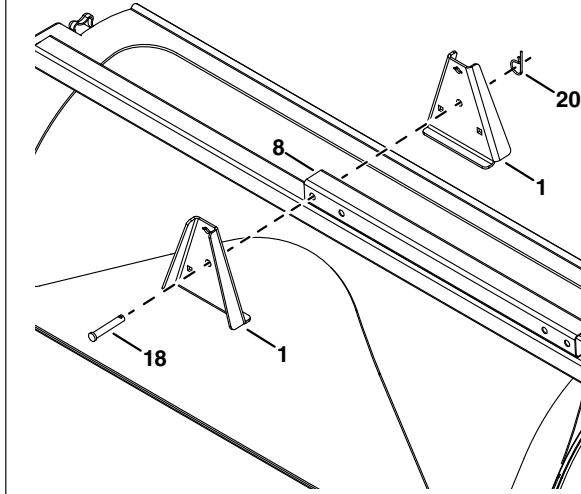


Assembly Step 2

1. Attach the drawbar and drawbar brackets to the sweeper using two 5/16 x 3" carriage bolts (23), 3/4" spacers (30), and wing knobs (37).

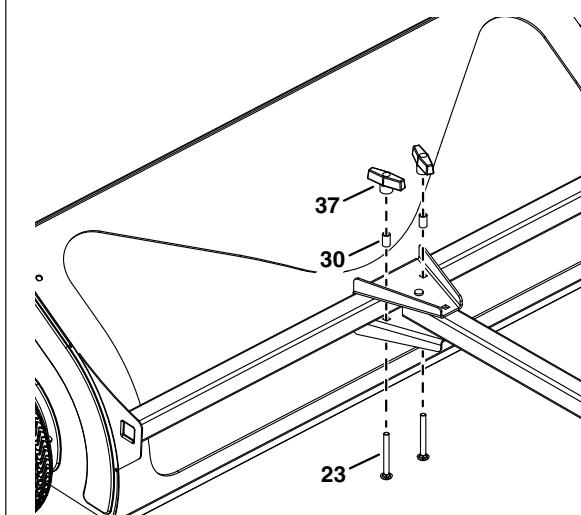


Assembly Step 3

1. Attach the handle holder (2) to the drawbar and drawbar brackets using a 3/32" hair pin (20).

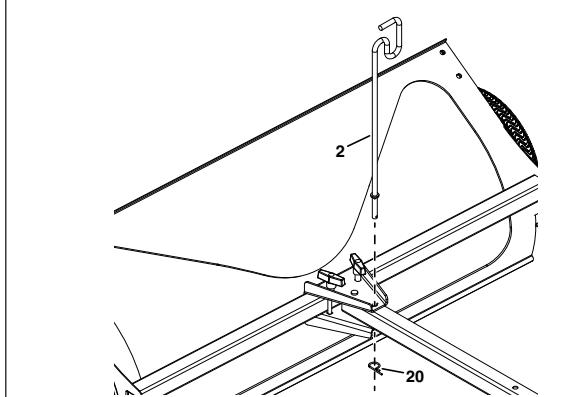


Assembly Step 4

1. Attach brackets (15, 16) to the sweeper housing using four 5/16" x 3/4" hex bolts (25) and 5/16" nylock nuts (28). Repeat on other side with bracket (15).

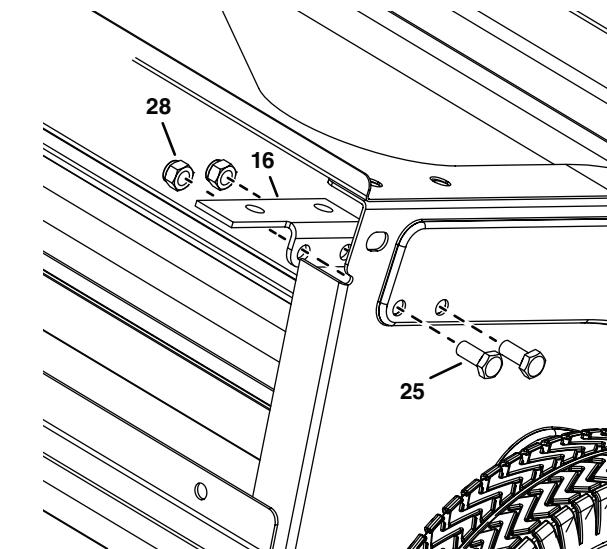


Assembly Step 6

1. Install a rear hopper tube (5) onto the ends of the two lower hopper tubes (13). Secure them with two 1/4 x 15/16" clevis pins (21) and 3/32" hair pins (20).

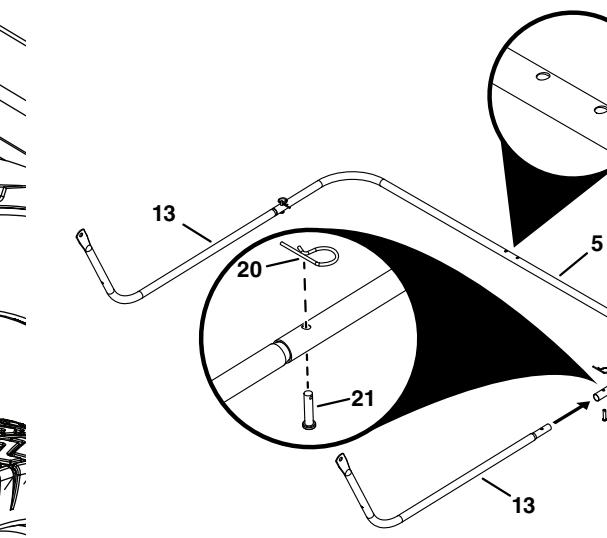


Assembly Step 7B

1. Install a rear hopper tube (5) onto the ends of the two upper hopper tubes (14). Secure them with two 1/4 x 15/16" clevis pins (21) and 3/32" hair pins (20).

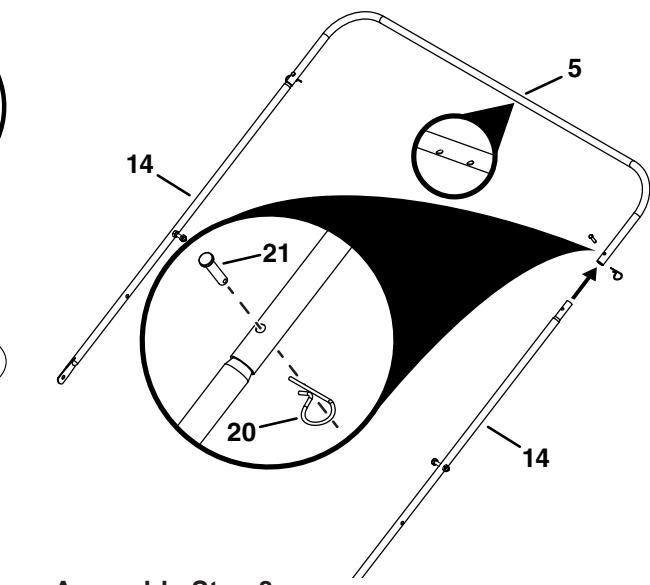


Assembly Step 7A

1. Install a 3/8-16 jam nut (32) onto each 3/8-16 x 2-1/2" bolt (17). Install bolt from inside of upper hopper tube (14). (See image below for bolt and tube orientation) Secure with a 3/8-16 nylock jam nut (24)

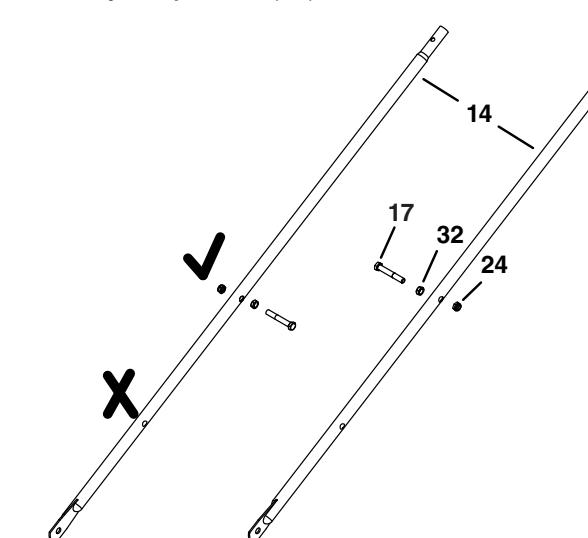

Assembly Step 8

1. Attach the upper and lower bag frame together using two 3/8 clevis pins (31) and 3/32" hair pins (20).

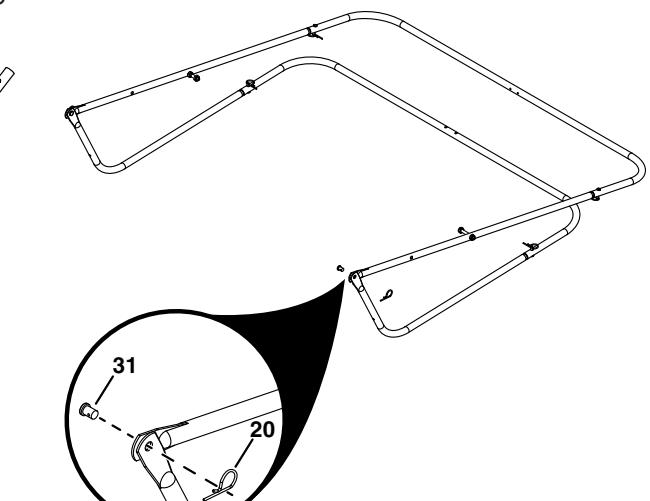

Quick Start Guide

45-04924 Push Spreader

Read the manual that came with your Push Spreader for:
 • Important safety warnings
 • Further explanation of features
 • Operating instructions and flow control adjustments

Problem?
 Call 1-800-448-9282

Agri-Fab

Quick Start Guide

45-04924 Push Spreader


Read the manual that came with your Push Spreader for:
 • Important safety warnings
 • Further explanation of features
 • Operating instructions and flow control adjustments

Problem?
 Call 1-800-448-9282

Agri-Fab


Assembly Step 9

- Slide the bag frame into the hopper bag (10).

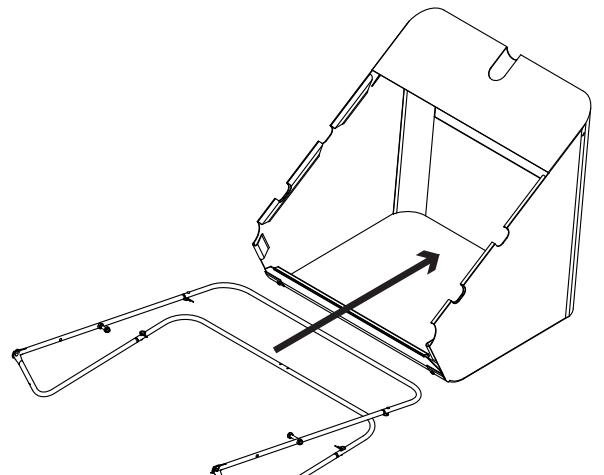


Assembly Step 11

- Insert the hopper support rods (3) into the holes of the upper hopper tube. Then, flex and insert the rods into the holes in the bottom rear hopper tubes.

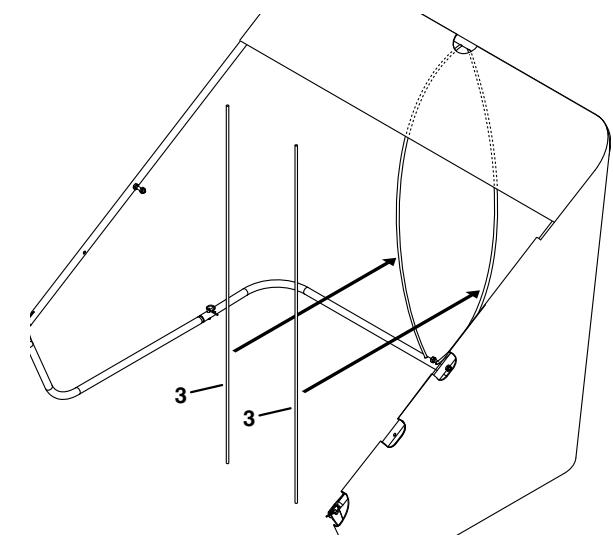


Assembly Step 13

- Starting from the bottom of the bag, secure the hopper bag to the sides of the bag frame using the velcro straps (2, 3, 4 and 5). Secure the bag to the top of the hopper frame using the tie straps (6). Snap the sides of the hopper bag to the bottom of the hopper bag at the front corners (1).

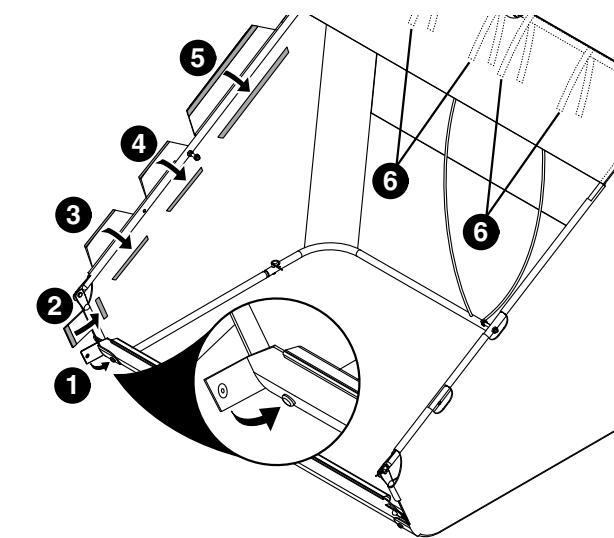


Assembly Step 15

- Attach the upper handle tube to the rear hopper tube using a U-clamp (35), 5/16 x 1-1/4" clevis pin (22), and hair cotter pin (26).

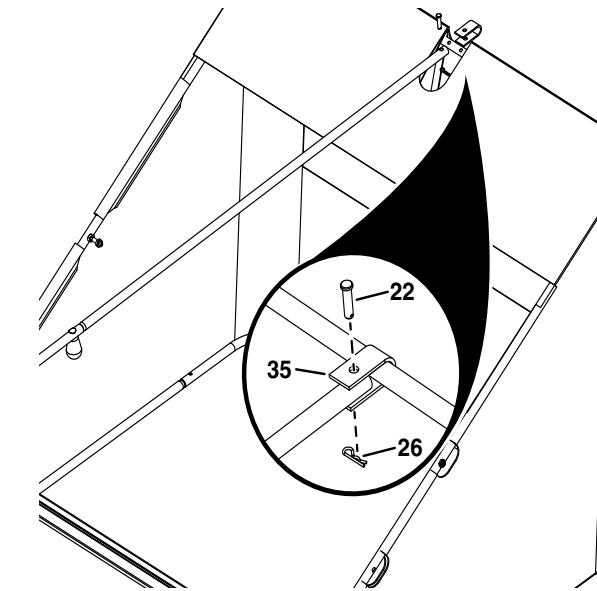


Assembly Step 17

- Measure the height of your tractor's hitch.

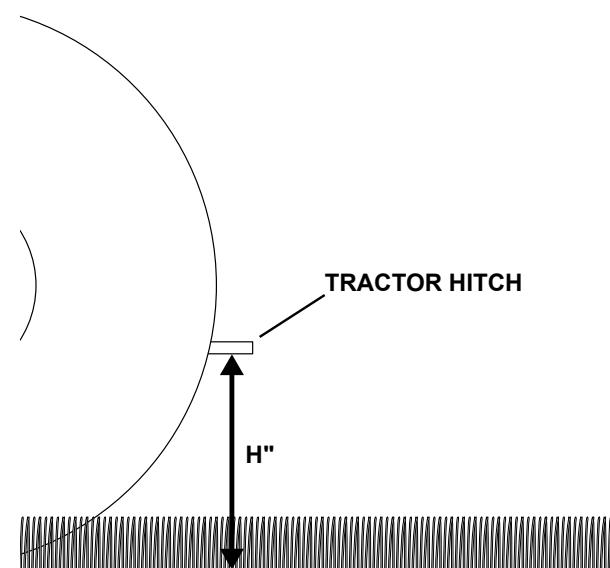


Assembly Step 10

- Slide the bag frame tube (4) through the front flap of the hopper bag.

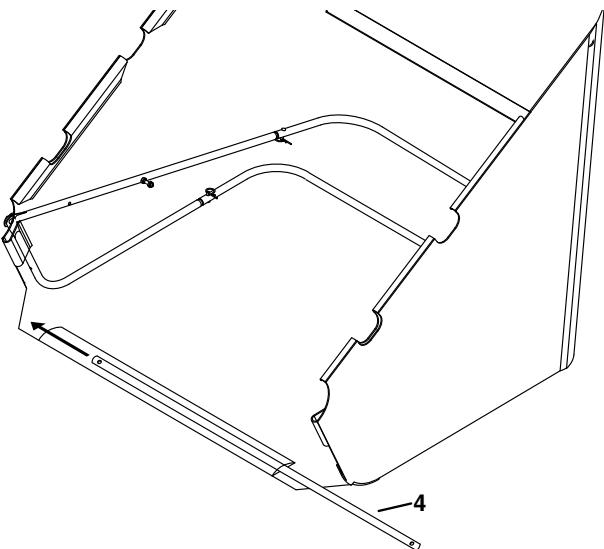


Assembly Step 12

- Secure the bag frame tube to the lower hopper tubes using two 1/4 x 15/16" clevis pins (21) and 3/32" hair pins (20)

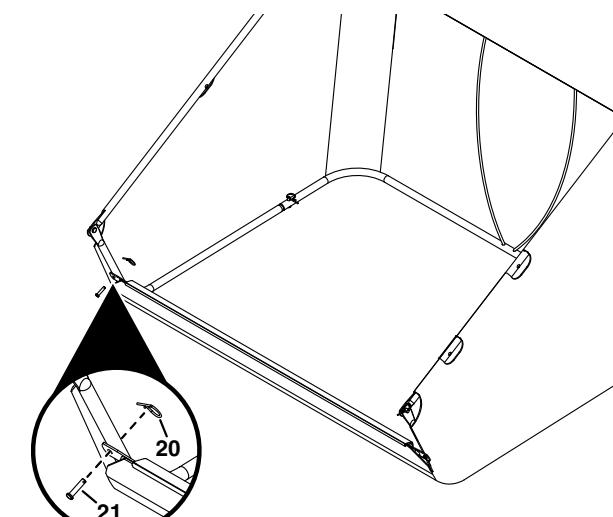


Assembly Step 14

- Assemble the upper handle tube (11) to the lower handle tube (9) using a 1/4 x 1" bolt (19) and knob (36). Then, assemble the handle grip (33) to the lower handle tube (9).

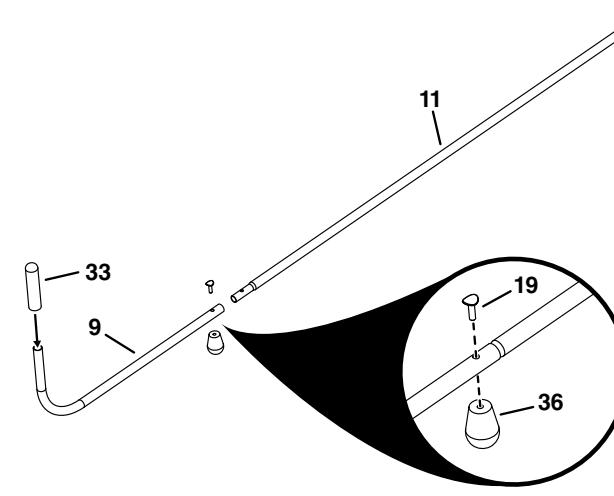


Assembly Step 16

- Insert the bolts on the sweeper bag into the bag arms.

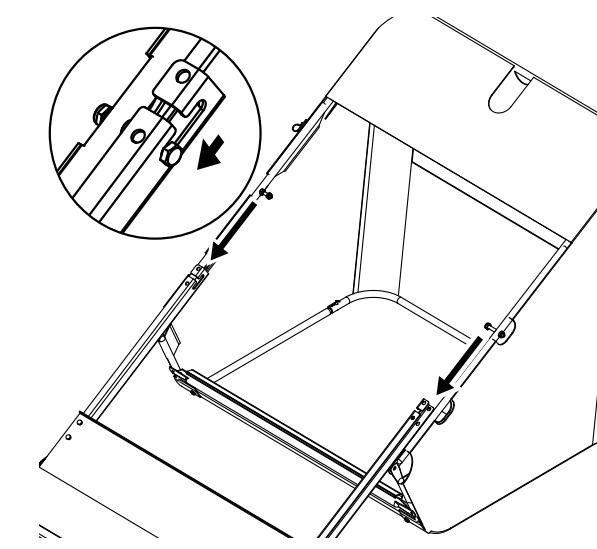

Assembly Step 18

- Arrange the hitch brackets (6,7) according to the height of your tractor's hitch. Assemble the hitch brackets to the drawbar using two 5/16" x 2-1/2" hex bolts (29) and 5/16" nylock nuts (28).
- Assemble the hitch pin (34), the two spacers (38), and the 3/32" x 2-5/16" hair cotter pin (27) to the hitch brackets.

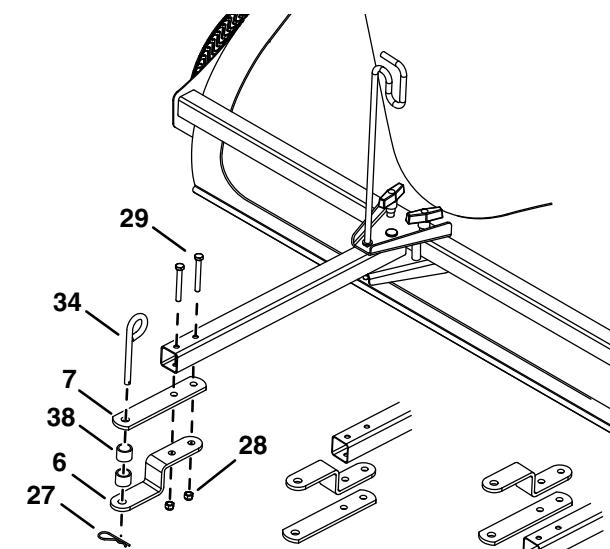

7" - 9"
**HITCH
HEIGHT**

9" - 11"
**HITCH
HEIGHT**

11" - 13"
**HITCH
HEIGHT**