


PACKAGE CONTENTS

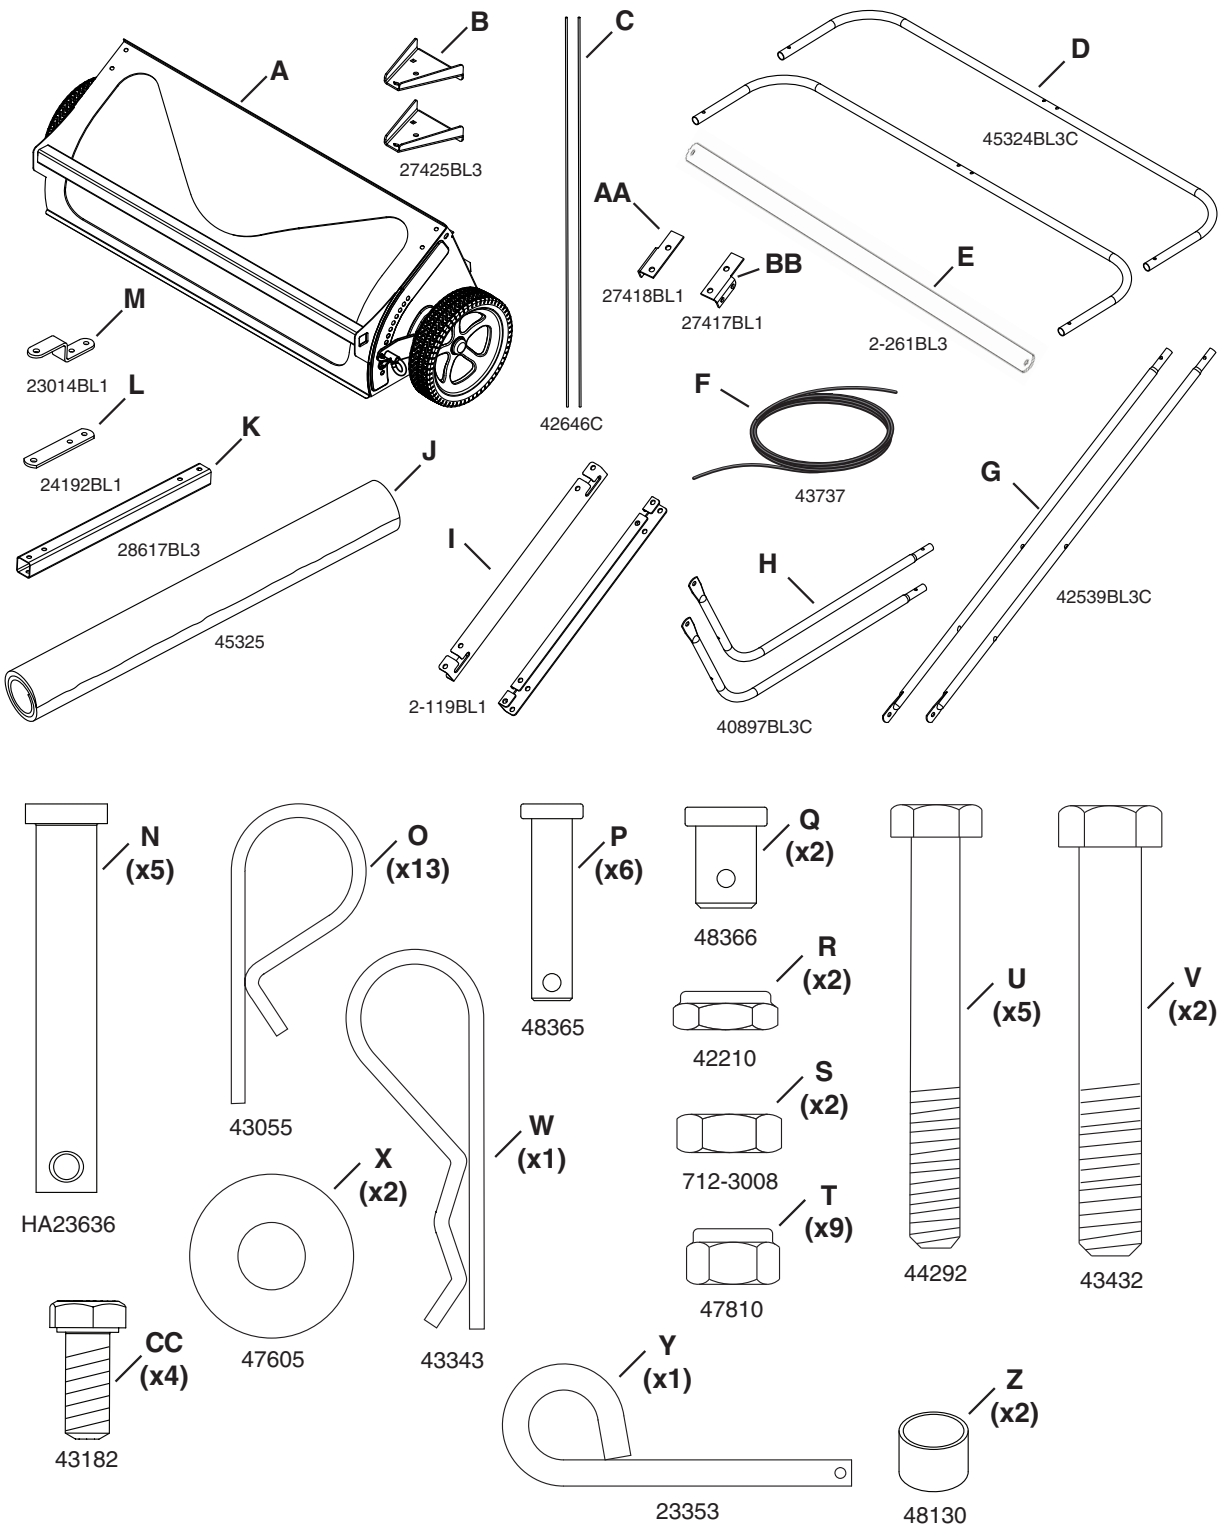

TOOLS REQUIRED FOR ASSEMBLY

- (1) Pliers
- (2) 7/16" Wrenches
- (2) 1/2" Wrenches

STEP 1: (SEE FIGURE 1)

- Attach the drawbar brackets (B) to the drawbar (K) and sweeper housing (A) using 5/16-18 x 2-1/2" hex bolts (U), 1" washers (X), and 5/16-18 nylock nuts (T). Do not fully tighten the hardware.

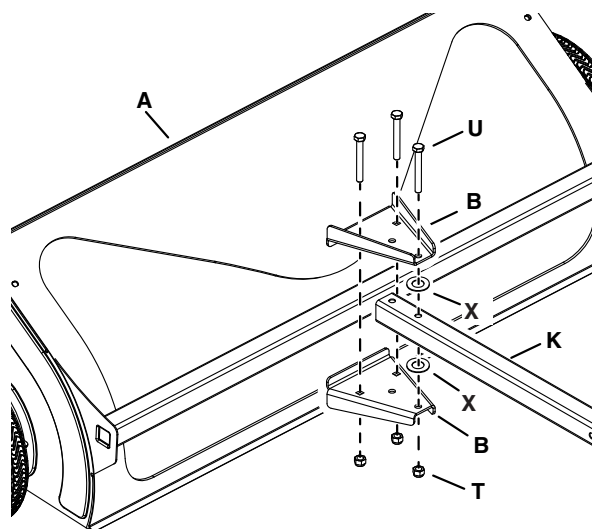


Figure 1

STEP 2: (SEE FIGURE 2)

- Install a 3/8" x 2-1/4" clevis pin (N) and 3/32" x 1.8" hair pin (O) into the drawbar assembly.
- Tighten the hardware from Step 1.

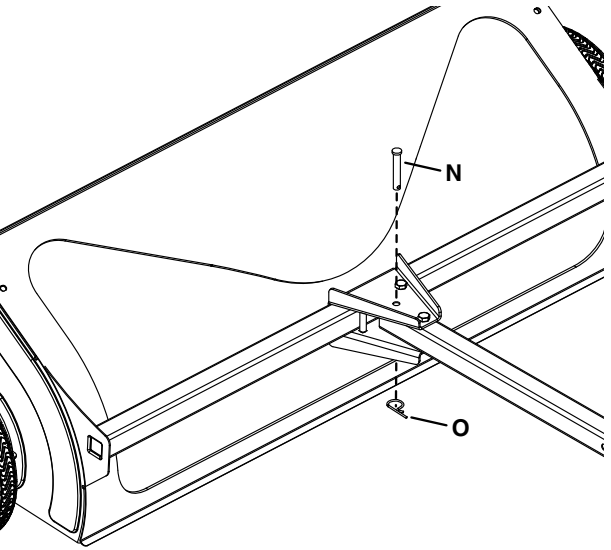


Figure 2

STEP 3: (SEE FIGURE 3)

- Attach the right bag arm bracket (AA) to the sweeper housing using 5/16-18 x 1" hex bolts (CC) and 5/16-18 nylock nuts (T).
- Tighten the hardware.
- Repeat for the other side.

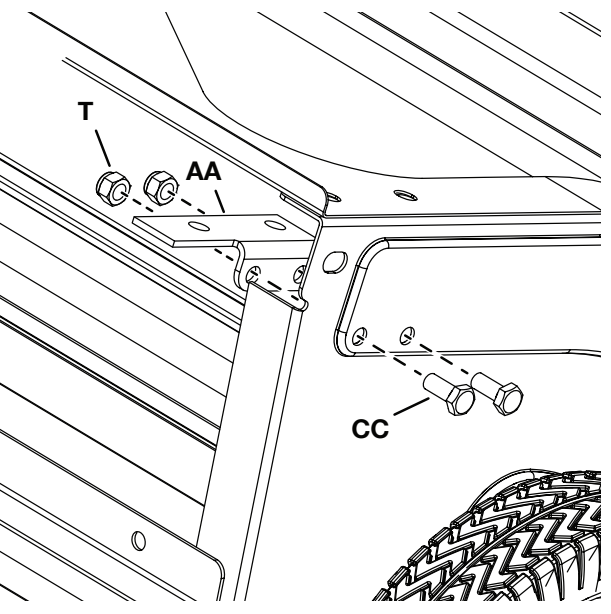


Figure 3

STEP 4: (SEE FIGURE 4)

- Attach the bag arm (I) to the sweeper housing using 3/8" x 2-1/4" clevis pins (N) and 3/32" x 1.8" hair pins (O).
- Repeat on the other side.

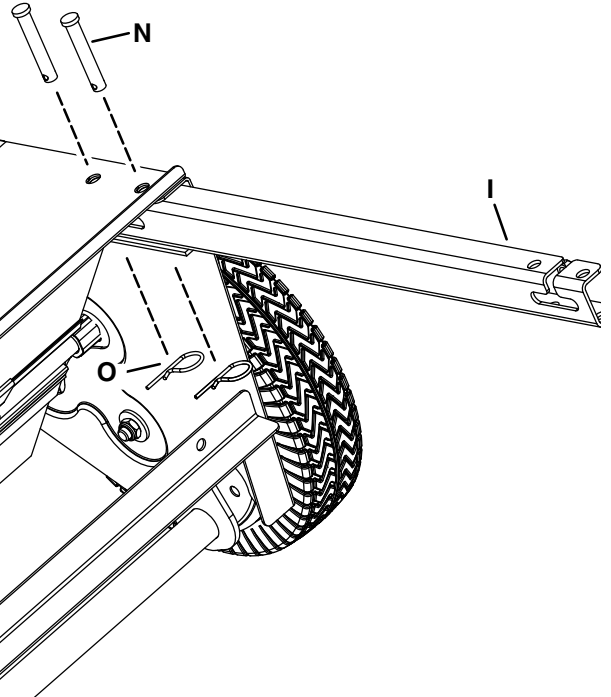


Figure 4

STEP 5: (SEE FIGURE 5)

- Attach the lower hopper tubes (H) to the rear hopper tube (D) using 3/32" x 1.8" hair pins (O) and 1/4" x 1.11" clevis pins (P).
- Ensure the holes are facing up on the rear hopper tube (D).

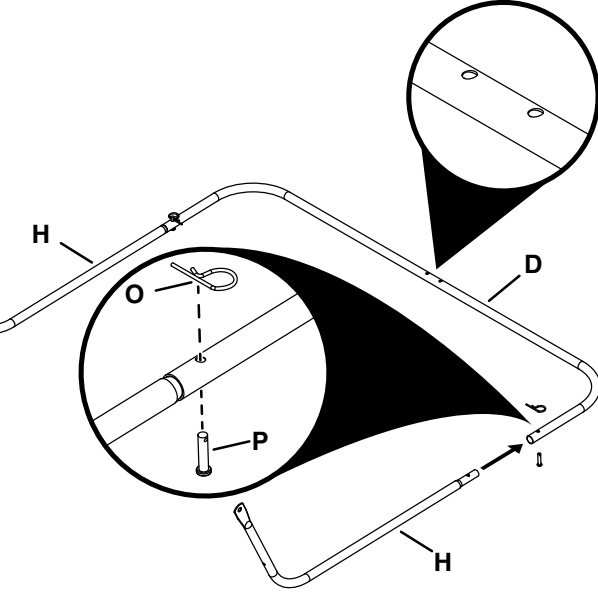


Figure 5

STEP 6: (SEE FIGURE 6)

- Attach a 3/8-16 x 2-1/2" hex bolt (V), 3/8" jam nut (S), and 3/8" nylock jam nut (R) to each upper hopper tube (G).
- Ensure they are attached to the correct holes on the tubes as shown.

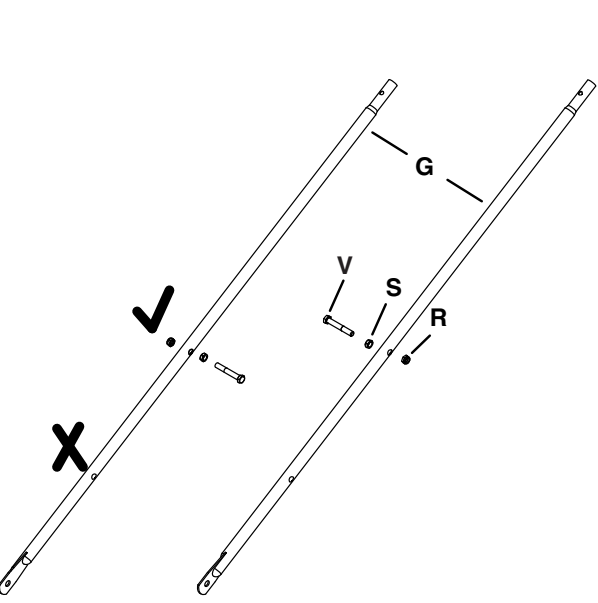


Figure 6

Quick Start Guide

45-05216 Lawn Sweeper

Read the manual that came with your Lawn Sweeper for:

- Important safety warnings
- Further explanation of features
- Operating instructions

Problem?
Call 1-800-448-9282

Agri-Fab

Quick Start Guide

45-05216 Lawn Sweeper

Read the manual that came with your Lawn Sweeper for:

- Important safety warnings
- Further explanation of features
- Operating instructions

Problem?
Call 1-800-448-9282

Agri-Fab

STEP 7: (SEE FIGURE 7)

- Attach the upper hopper tubes (G) to the other rear hopper tube (D) using 1/4" x 1.11" clevis pins (P) and 3/32" x 1.8" hair pins (O).
- Ensure the holes are facing down on the rear hopper tube (D).

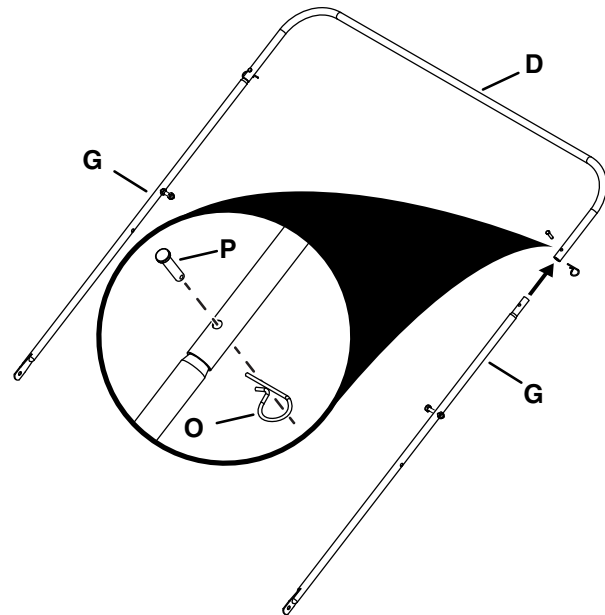


Figure 7

STEP 8: (SEE FIGURE 8)

- Secure the upper and lower hopper tubes together using 3/8" x 1/2" clevis pins (Q) and 3/32" x 1.8" hair pins (O).

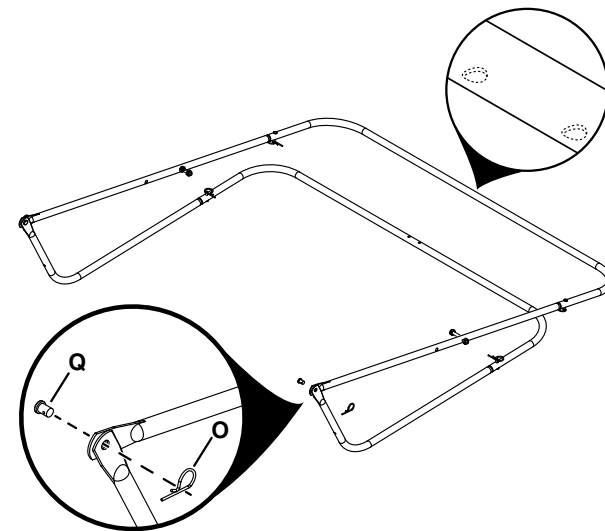


Figure 8

STEP 9: (SEE FIGURE 9)

- Slide the hopper tube assembly into the hopper bag.

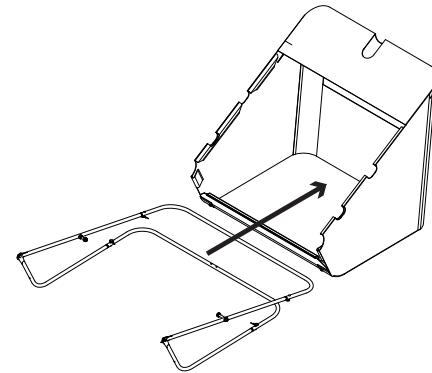


Figure 9

STEP 10: (SEE FIGURE 10)

- Slide the bag frame plate (E) into the bottom front of the hopper bag.

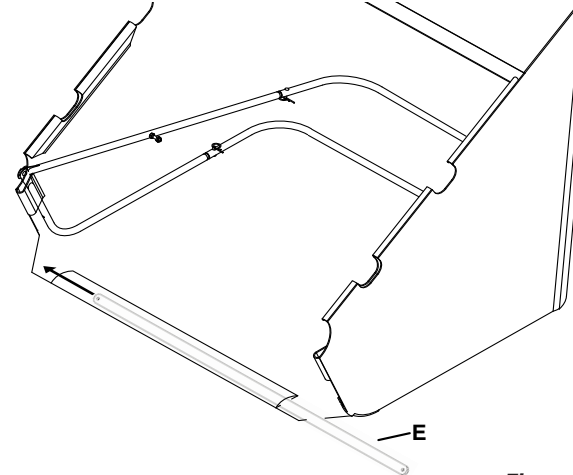


Figure 10

STEP 11: (SEE FIGURE 11)

- Position a hopper support rod (C) into the hole on the lower support tube. Lightly bend the rod (C) outwards and place the other end into the hole on the upper support tube. Repeat on the other side.

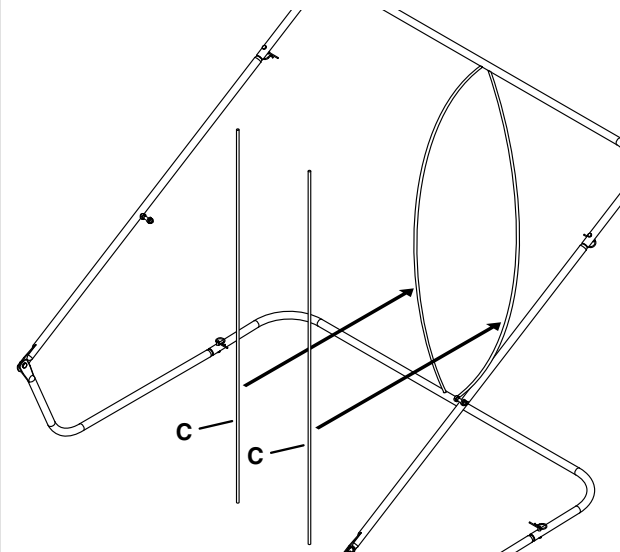


Figure 11

STEP 12: (SEE FIGURE 12)

- Secure each end of the bag frame plate (E) to the hopper tube assembly using 3/32" x 1.8" hair pins (O) and 1/4" x 1.11" clevis pins (P).

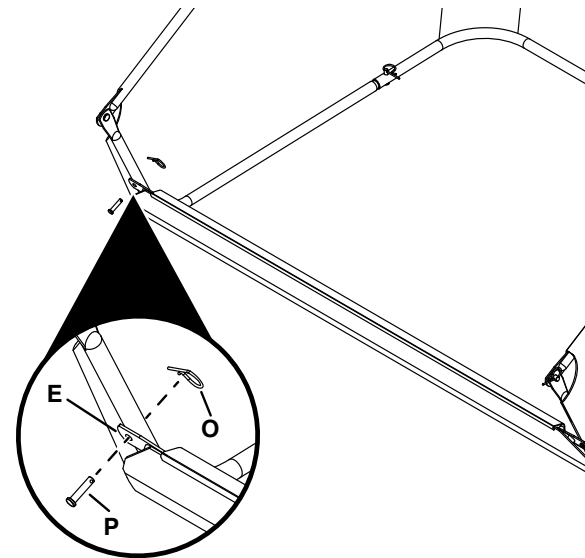


Figure 12

STEP 13: (SEE FIGURE 13)

- Velcro the hopper bag flaps (2, 3, 4, 5) around the upper support to the inside of the hopper bag on both sides.
- Secure the snap button on both sides of the hopper bag.
- Tie the bag ties (6) around the upper rear hopper tube.

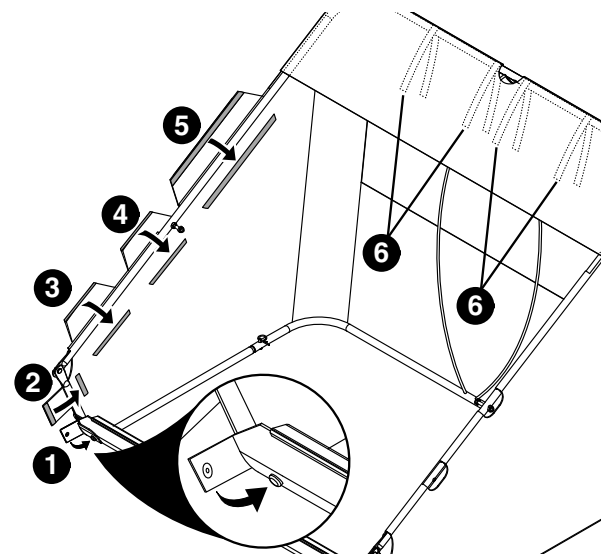


Figure 13

STEP 14: (SEE FIGURE 14)

- Tie the hopper rope (F) onto the upper rear hopper tube.

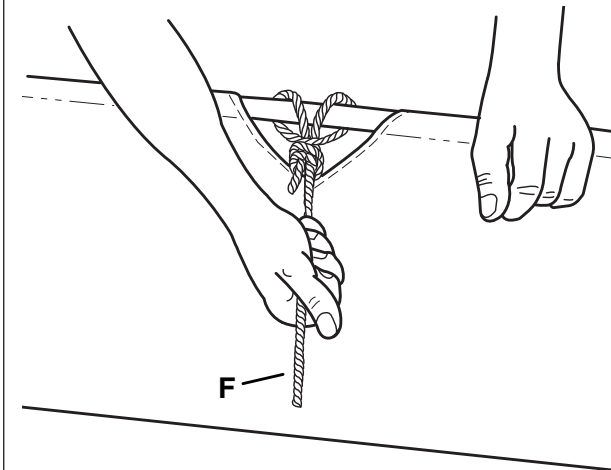


Figure 14

STEP 15: (SEE FIGURE 15)

- Insert the bolts on the upper hopper tubes into the bag arms.

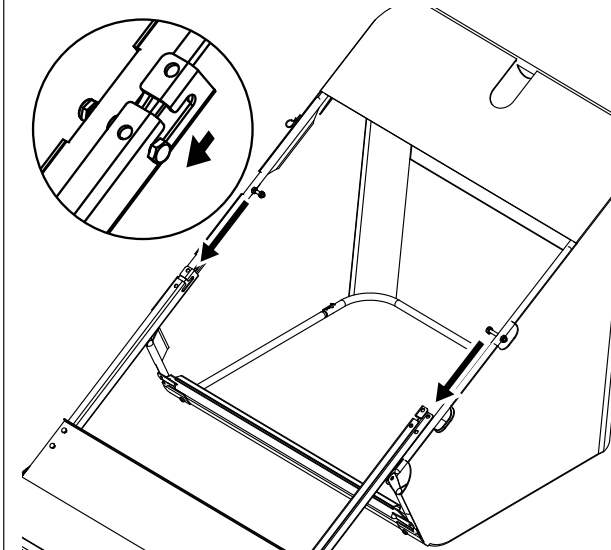


Figure 15

STEP 16: (SEE FIGURE 15)

- Attach the hitch to the drawbar based upon your height requirements.
- Secure the straight hitch bracket (L) and curved hitch bracket (M) together on the front of the drawbar using 5/16-18 x 2-1/2" hex bolts (U) and 5/16-18 nylock nuts (T).
- Install the hitch pin (Y), spacers (Z), and 3/32" x 2-5/16" hair cotter pin (W).

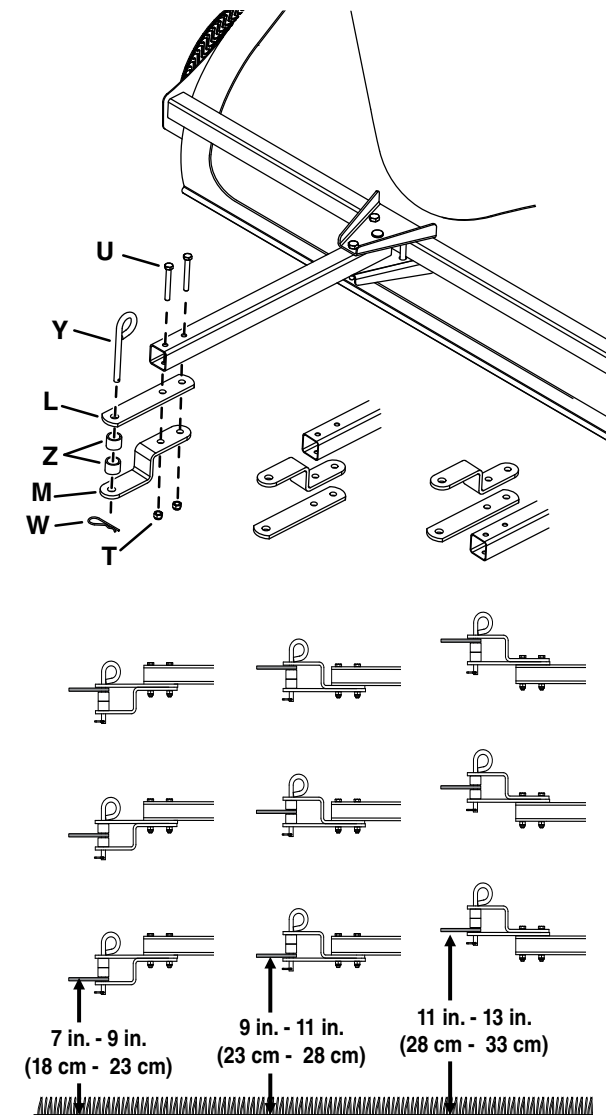


Figure 16